



AUDIAL

WC0755 14032018



Full Size Jukebox

Instruction Manual

Model Ref: WC0755

INTRODUCTION

Congratulations on choosing to buy an Audial product. All products brought to you by Audial are manufactured to the highest standards of performance and safety.

Before use, please read this manual carefully. It gives important instructions about safety, use and maintenance of your bluetooth speaker.

We hope you enjoy using your purchase for many years to come. Remove all packaging material. You may wish to keep the packaging for future use or storage of your console jukebox. Alternatively, dispose of accordingly.

CONTENTS

Important Safety Information	02
Product Overview	05
Technical Specification	08
Getting Started	08
Using The Jukebox.....	08
After Sales Support	14
Product Guarantee	14

IMPORTANT SAFETY INFORMATION

PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS USER MANUAL AND MARKED ON THE PRODUCT. RETAIN THIS BOOKLET FOR FUTURE USE.

This equipment has been designed and manufactured to assure your personal safety. Improper use can result in electric shock or fire hazard. The safeguards in this product will protect you if you observe the correct procedures for installation, servicing and operation. There are no user parts inside.


- **DO NOT** expose the jukebox to high temperatures, direct sunlight, moisture, rain or a highly dusty environment.
- **DO NOT** dispose of the jukebox in a fire to avoid explosion.
- **DO NOT** disconnect the jukebox from the mains power supply by pulling on the cord.
- **DO NOT** attempt to disassemble the product, or use alcohol, thinners or benzene to clean the jukebox as this will cause damage to the unit.
- **DO NOT** disassemble, repair or modify the jukebox. Refer servicing to qualified personnel only.
- Never subject any heavy impact on the jukebox such as dropping or shaking.
- Keep away from magnetic sources.
- It is not recommended to use the jukebox at a high volume for an extended period of time as this may cause damage to your hearing.
- Once the casing has been tampered with the company shall not be liable for any resulting damages or faults.
- Clean with a dry cloth only. Make sure the jukebox is turned off before and do not use liquid or abrasive cleansers.

- Only use this jukebox for its intended domestic use. JDW will not accept any liability if the bluetooth speaker is subject to improper use or failure to comply with these instructions.
- Keep the jukebox and its power supply cord away from heat or sharp edges that could cause damage.
- Use of an extension cord with the jukebox is not recommended.
- This bluetooth jukebox should not be operated by means of an external timer or separate remote control system.
- Keep the jukebox speaker away from flammable materials.
- Do not drag or slide the music centre when moving or positioning.
- This product should be lifted by two people at either side when moving.
- Dragging or sliding the music centre may cause damage to the music centre or the floor surface. JDW are not responsible for any damage caused by incorrect moving of this product.
- The company reserves the right to improve the product specification and design. The information is subject to changes without prior notice.
- This jukebox speaker has no waterproof function.
- All pictures in this manual are just for your reference only.
- Kindly read this user manual before using the jukebox carefully, and keep it for future reference.
- Place the equipment on a stable surface, away from any heat sources, and ensuring adequate ventilation around the jukebox.

- Do not place material over any ventilation slots during use, this will cause the device to overheat and fail. Do not place the device in direct sunlight or near heat sources such as radiators or fires.
- Do not place lighted candles or tealights on top of, or at the sides of the jukebox.
- Do not allow any naked flames near the cabinet.
- When connecting the jukebox to the mains power adaptor, do not place wires that can be tripped over. Do not trap or place heavy objects on the power cable.
- Do not place the equipment in wet or damp conditions, such as steamy kitchens, bathrooms or basements.
- Do not allow water or other fluids to enter the equipment.
- Do not touch the mains plug or adaptor with wet hands. Should moisture enter the jukebox, disconnect from the supply and call for assistance.


PRODUCT OVERVIEW

1. Light Control
2. Displays Stereo FM Reception
3. LCD Display
4. Standby Indicator
5. USB Socket
6. Standby Button
7. Record Button
8. Folder Navigation Buttons
9. Repeat Button
10. Mode Button
11. Volume Dial
12. CD Tray
13. Previous Button
14. Play/Pause Button
15. Next Button
16. Stop Button
17. CD Open/Close Button

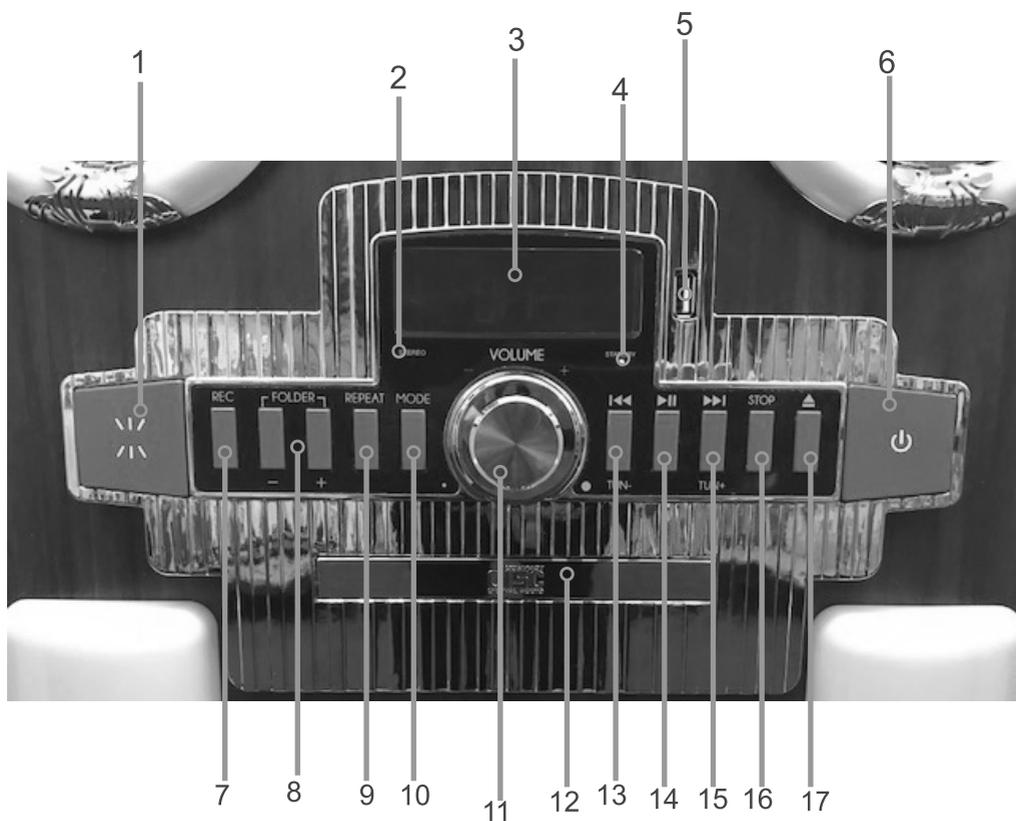


REAR

- 18. FM Antenna
- 19. AUX In
- 20. Audio Out
- 21. Power Switch
- 22. Mains Power Cable

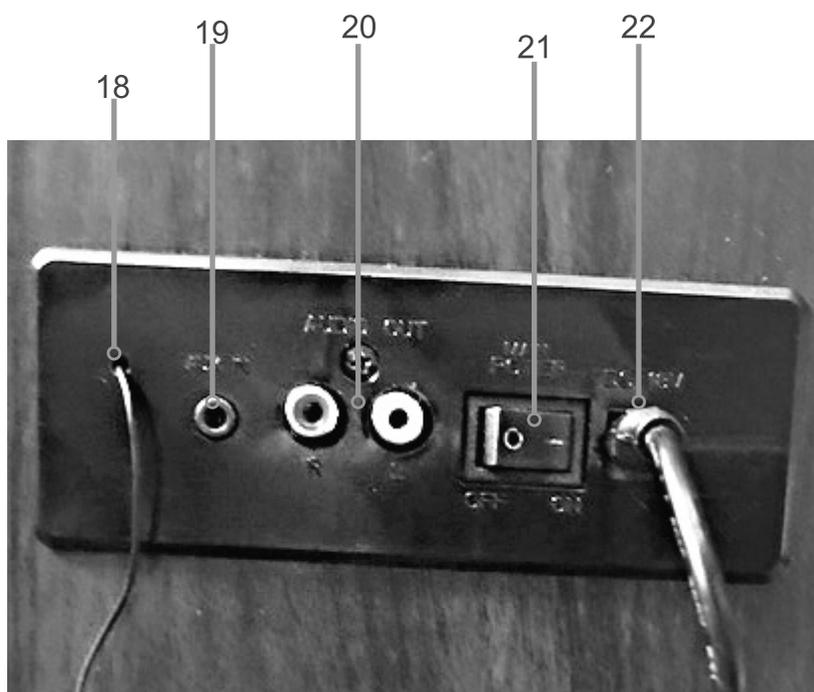

REMOTE

- 23. Standby Button
- 24. CD/USB Button
- 25. Repeat Button
- 26. Previous Button
- 27. Program Button
- 28. +10 Button
- 29. Previous Folder Button
- 30. Open/Close CD Tray
- 31. Mode Button
- 32. Lights On/Off
- 33. Random Playback Button
- 34. USB Recording
- 35. Pairing Button
- 36. Next Button
- 37. Volume Down Button
- 38. Volume Up Button
- 39. Delete Button
- 40. Play/Pause
- 41. Next Folder Button
- 42. Stop Button

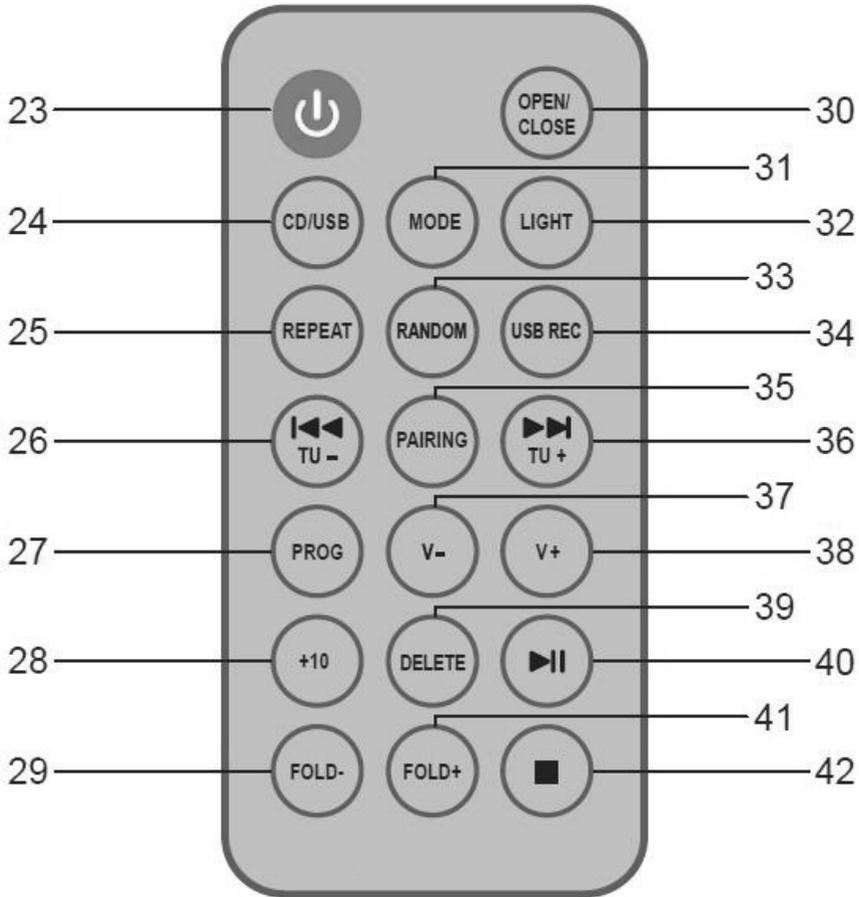

TECHNICAL SPECIFICATION

Description:	Full Size Jukebox
Model:	WC0755
Rated Voltage:	100-240V
Frequency:	50-60hZ
Power Consumption:	100W

GETTING STARTED

1. Remove all packaging materials, stickers and labels.
2. Read all safety instructions and safety information on pages 2-4 of this manual.
3. Connect the mains power adapter to a suitable mains power outlet and then to DC 18V (22) on the rear of the jukebox.
4. Switch the power (21) on.
5. Press the standby button (6) to switch the jukebox out of standby mode.
6. Rotate the volume dial (11) to adjust the volume.
7. Press the mode button (10) to switch between input modes.

USING THE JUKEBOX PLAYING A CD

8. To listen to a CD, press the mode button (10) until the display shows CD.
9. To load an audio CD press the CD open/close button (17) to open the tray. Load the CD with the label facing up and close the tray by pressing the CD open/close button (17).
10. Press the play/pause button (14) to play or pause playback. The display time will flash when paused
11. To stop playback press the stop button (16).

12. To skip backwards through tracks press the previous button (13). Press and hold to rewind.
13. To skip forwards through tracks press the next button (15). Press and hold to fast-forward.
14. To repeat the current track playing press the repeat button(9), to repeat the whole CD press the repeat button (9) again, to cancel repeat press the repeat button (9) again.
15. To programme a different track order from the remote control: Press the program button (27) and P01 will start flashing on display, use the previous button (26) and the next button (36) to select required track number, press the program button (27) to store and move to next track, repeat this process until all required tracks programmed.
16. Press the play/pause button(40) to start program playback. Press the stop button(42) twice to cancel stored selections.
17. The Display (3) will show current track number and time during playback, or the total numbers of tracks and total disc time when stopped.
18. If no CD is detected the Display (3) will display NO DISC.

LISTENING TO THE RADIO

19. To listen to a radio station press the mode button (10) until the display shows TUNER and the current frequency.
20. Press and hold the play/pause button (14) to perform a station scan.
21. When scan is complete, press the previous button (13) and the next button(15) to move through stations found.
22. Radio reception can be improved by adjusting the position of the FM Antenna (18).

CONNECTING USB MEMORY

23. To insert a USB memory stick, gently insert connector into USB socket (5).

PLAYING FROM A USB

24. To play from a connected USB device press the mode button (10) until the display shows USB and any files found on memory device. The first file found will start playing automatically.

25. To switch between folders on the device press the folder navigation buttons (8).

26. Playback controls are the same as the CD player (see Page 09).

PLAYING FROM A USB

Before listening to your Bluetooth device you will need to pair it to the Music Centre.

27. To begin, press the mode button (10) until the display shows BT AUX

28. Open the Bluetooth settings on your Bluetooth device and search for and select "WC0755". When pairing is successful you will hear a chime from the speakers if the volume is up.

29. Your jukebox will connect automatically to the last paired Bluetooth device.

30. The Bluetooth input is shared with the Aux in (19) input. If a cable is connected to Aux in then Bluetooth will not be active.

Remember not to set the volume too high on your playback device, if the sound is distorting try turning the volume down on your playback device and up on the jukebox.

LISTEN TO AN EXTERNAL SOURCE

31. Before listening to an external source, such as an MP3 player or smartphone, connect a suitable cable (3.5mm jack to 3.5mm jack) to the Aux in (19) socket.
32. To listen to an external source press the mode button (10) until the display shows BT/AUX.

Remember not to set the volume too high on your playback device. If the sound is distorting try turning the volume down on your playback device and up on the music centre

CONNECTING USB MEMORY

33. Your jukebox flashing lights will come on whenever the product is switched on.
34. To switch the flashing lights off press the light control button (1).
35. To switch the flashing lights back on press the light control button (1).
36. Should you wish to keep the lights flashing with no music playing, play a CD with the volume at minimum, this way the automatic standby will not activate.

RECORDING TO USB

37. Recording is possible from CD and BT/AUX. Before recording you will need to connect a suitable USB memory stick to the USB socket (5). Choose the recording source using the mode button(10) button until the display shows the required mode.

Recording from CD:

38. Start playing the song to be recorded.

39. Press and hold the record button (7) and REC ONE will flash on the display (3).

40. Press the previous button (13) or the next button (15) to change between ONE or ALL tracks on the CD.

41. Press the record button(7) to start. Recording will stop when complete.

Recording from BT/AUX:

42. Press and hold the record button (7) to start recording. After a second USB will begin to flash on the display (3).

43. Start playing the song to be recorded.

44. Press the stop button (16) or the record button (7) to stop recording.

45. To delete a recording or track: Select track, press the delete button (39), press the next button(15) to change between ONE, FOL (folder) and ALL, press the delete button (39) to confirm.

46. Press the stop button(16) to cancel. This operation is not reversible, delete with care.

Adjusting the volume during recording will not affect the recorded volume.

Recording does not start instantly. Keep an eye on the USB indicator and always check your recordings when finished.

Always allow the USB memory device to complete its actions.

Never disconnect the USB memory device while recording or

playing.

MANAGE YOUR RECORDINGS

47. Any recordings made will be saved in a folder named “REC” (for BT/AUX) and “RIP” (for CD) on the connected memory device.
48. Recording format: MP3 - 128kbps (CD) 192kbps (BT/AUX)
49. Recordings are named sequentially (e.g.. TRK1.MP3, TRK2.MP3, Etc.).
50. It is recommended to transfer your recordings to your home computer once recording has finished, this will enable you to name the tracks and place in folders.

AFTER SALES SUPPORT

If you need help using your product, please contact Giani Ltd:-

- Telephone: 0161 480 6204.
- Email: info@gianiuk.co.uk.
- Website: www.gianiuk.co.uk.
(Replacement instruction manuals are available to download from the website).

PRODUCT GUARANTEE (UK ONLY)

If your appliance ceases to function within 1 year from the date of purchase, the retailer will replace it free of charge, provided:

- You have not misused, neglected or damaged it.
- It has not been modified (except by Giani Ltd).
- It was not purchased second hand.
- It has not been used commercially.
- You can supply proof of purchase, indicating the price you paid and where and when the appliance was purchased.

This guarantee does not affect your statutory rights.

Disposal Information

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE APPLIANCE IN ACCORDANCE WITH EC DIRECTIVE 2002/96/ECO.

At the end of its working life, the appliance must NOT be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.



AUDIAL

Wellington Grove,
Stockport, SK2 6RH

