



BS700LB 06062018



Disco Ball Sound Tower

Instruction Manual
Model Ref: BS700LB

Introduction

Thank you for choosing this Disco Ball Sound Tower. This product is manufactured to the highest standards of performance and safety.

Before use, please read this manual carefully. It gives important instructions about safety, use and maintenance of your appliance.

Remove all packaging material. You may wish to keep the packaging for future use or storage of your appliance. Alternatively, dispose of accordingly.

Important Safety Information

When using electrical appliances, basic precautions should always be followed, including the following;


1. This appliance is for domestic use only. Do not use outdoors or on wet surfaces.
2. Do not handle the plug or appliance with wet hands.
3. Do not immerse the main body in water.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
5. Children must not play with the appliance.
6. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
7. Keep the appliance and its cord out of reach of children less than 8 years old.
8. This product is not a toy.
9. Do not use the appliance if any parts appear to be faulty, missing or damaged.
10. Always switch off at the mains supply before carrying out any cleaning, performing user maintenance or changing accessories.
11. Do not use the appliance if it has been dropped or damaged in any way.
12. Check to ensure that the electricity supply matches that shown on the rating plate.
13. Only use the attachments/accessories supplied with the product or recommended by Audial.
14. If the supply cord is damaged, it must be replaced by a qualified service agent in order to avoid a hazard

15. Only use this appliance for its intended domestic use. Audial will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.
16. Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
17. Keep the power supply cord away from any parts of the appliance that may become hot during use.
18. Do not disconnect the appliance from the mains power supply by pulling the cord, switch it off and remove the plug by hand.
19. Do not move the appliance when it is in use.
20. Use of an extension cord with the appliance is not recommended.
21. This appliance should not be operated by means of an external timer or separate remote control system.
22. Keep the appliance away from flammable materials.


 <p>The lightning flash and arrow head within the triangle is a warning sign alerting you of dangerous voltage inside the product</p>	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p style="text-align: center;">CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL</p>	 <p>The lightning flash and arrow head within the triangle is a warning sign alerting you of dangerous voltage inside the product</p>
--	---	--

Accessories

4 X Screws

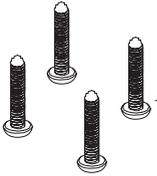


Tower Base

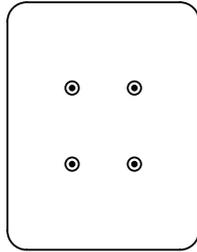

Remote Control



A/C Adapter

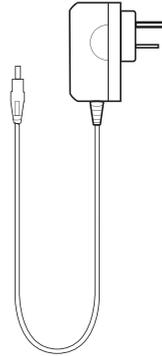


3.5mm Aux Cable



Media Controls


Top Panel

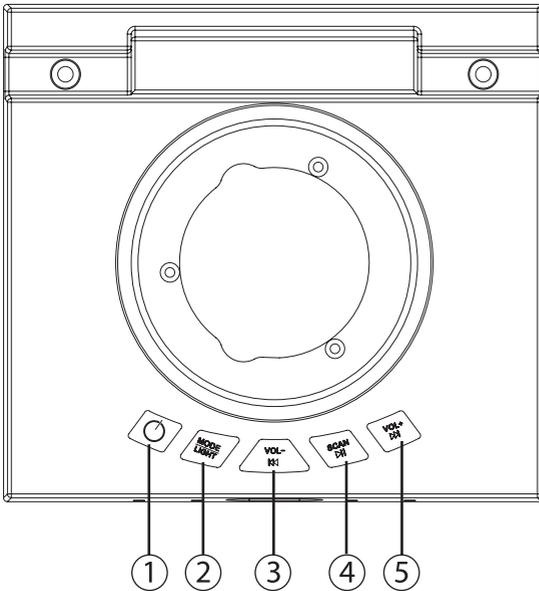

- 1. Power Button:** On/Off
- 2. Mode/Light:**
Quick Press - Bluetooth, AUX in, FM Radio.
Long press - Activate light
- 3. Volume Down/Fast Rewind:**
Quick Press - Previous song / tune FM radio down
Long Press - Decrease Volume
- 4. Scan & Play/Pause:**
Quick Press - Play / Pause
Long Press - Scan FM Radio
- 5. Volume Up & Fast Forward:**
Quick Press - Skip song / Tune FM Radio up
Long Press - Increase Volume


Media Controls Cont...

Front Panel

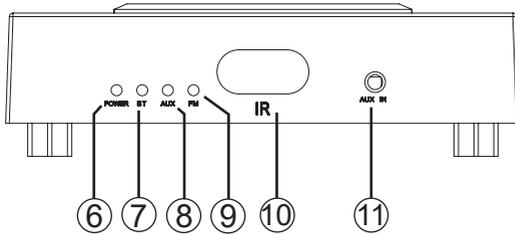

- 6. LED Power indicator light
- 7. LED bluetooth indicator light
- 8. LED AUX Indicator Light
- 9. LED FM Radio Indicator Light
- 10. Infrared Sensor
- 11. AUX in port


Back Panel

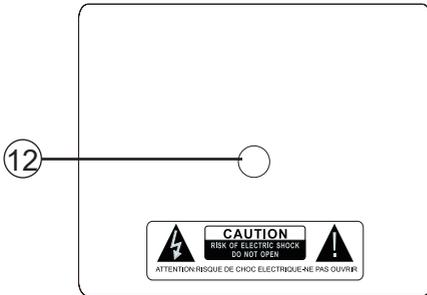


- 12. DC Power Input Socket

Remote Control

- 1. **Mode Button:** Bluetooth, AUX in, FM radio
- 2. **Power Button:** On/Off
- 3. **Tune Up / Fast Rewind:**
Quick Press - Previous Song
Long Press - Tune FM Radio up
- 4. **Tune Up / Fast Forward:**
Quick Press - Skip song
Long Press - Tune FM radio down
- 5. **Volume Down**
- 6. **Volume Up**
- 7. **Activate Disco ball**
- 8. **Mute Audio**
- 9. **Play / Pause**
Quick Press - Play / Pause
Long Press - Scan FM Radio
- 10. **Reset button**
- 11. **Sound Equaliser**
- 12. **Numeric buttons**

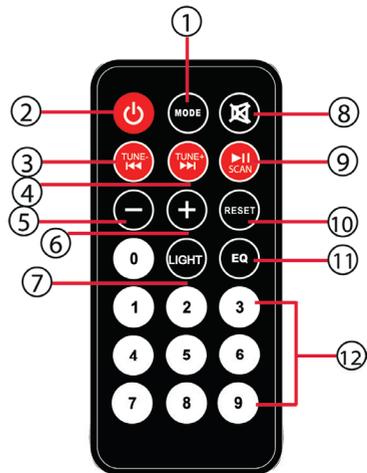



Installing the Battery In the Remote Control

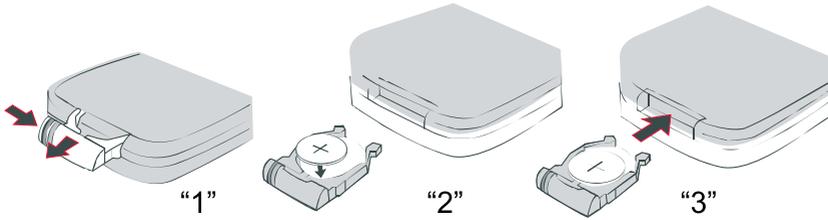

NOTE: The battery for the remote control (1 CR20S lithium battery) is included. To activate the battery pull out and remove the plastic insulating strip. Replace the battery, push and slide out the battery door in the remote control. Replace the battery with a new CR2025 battery with the polarity "+" facing up. Slide the door back.


Setting up the Speaker

1. Connect the wooden tower base to the speaker using the supplied screws (Fig 1).
2. Connect the small end of the AC adapter to the AC adapter port on the back of the speaker. Connect the other end to an available wall power outlet (Fig 2).

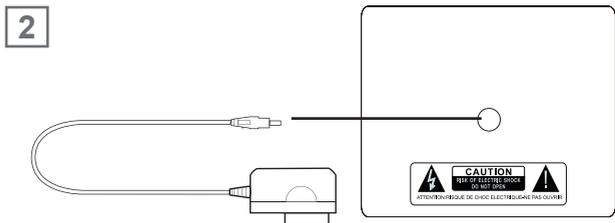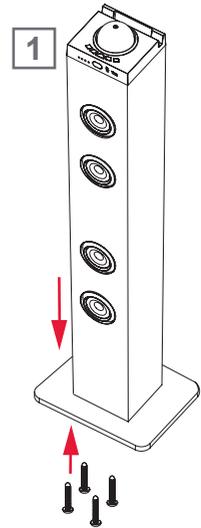

Pairing the Speaker

1. Plug the speaker into a power source.
2. Press the Power button on the top panel or by using the remote control.
3. Press the Mode/Light button on the speaker or the Mode button on the remote control repeatedly until the LED Bluetooth indicator light flashes green and a tone is heard.
4. Keep the speaker and Bluetooth enabled device within 3 feet of each other during the pairing process.
5. Set your mobile device to search for Bluetooth devices.

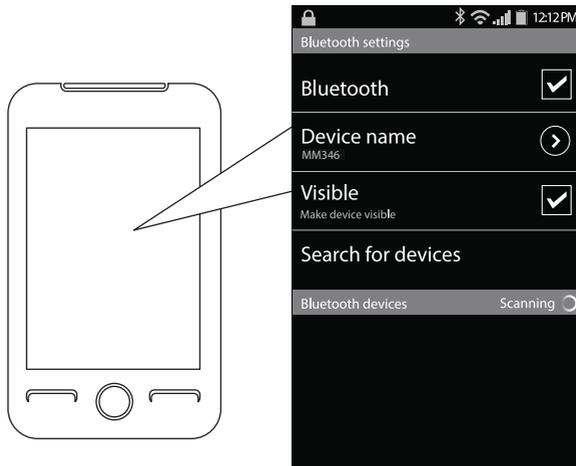

6. Select and pair with the device named MM346

Note: If a paired device is in range the speaker will connect to it automatically when Bluetooth mode is enabled. In order to connect to a different device the already connected device must be unpaired before a new device can be connected.

Using the Speaker

Powering On/Off

Turn the speaker on by pressing the Power button on the top panel or by using the remote control. Press again to turn off.

Adjusting the Volume

- Long press the Volume Up / Fast Forward button the speaker or the Volume Up button on the remote control to gradually increase the volume.
- Long press the Volume Down / Fast Backward button the speaker or the Volume Down button on the remote control to gradually decrease the volume.
- Press the Mute button on the remote control to mute the sound. Press again to turn the sound back on.

Note: You may also adjust the volume from your connected device's volume control.

Switching Modes

Press the Mode/Light button on the speaker or the Mode button on the remote control repeatedly to switch between modes. The LED indicator light will light up accordingly: Bluetooth, AUX and FM radio.

Disco Light

To turn on the Disco Light, long press the Mode/Light button on the speaker or the light Light button on the remote control. Long press again to turn off.

Playing Music

Playing Wireless music

To enjoy wireless music on your Wireless Tower Speaker, make sure you are connected to a Bluetooth enabled device. Once connected, press Play on the device. When the playback has begun, you can control the music with your connected device or the buttons on the Bluetooth speaker

Play / Pause

- Quick Press the Scan & Play/Pause button on the speaker or the remote control to pause the music.
- To resume music playback, quick press the Scan/Play button again.

Skipping songs

- Quick press the Volume down / Fast backwards button on the speaker or the remote control to skip to the previous song.
- Quick press the Volume Up / Fast Forwards button on the speaker or the remote control to skip to the next song.

Equalizer

Press the EQ button on the remote control to adjust the equalizer settings

FM Radio Mode

To listen to the radio by scanning

1. Press the Mode/Light button on the speaker or the Mode button on the remote control repeatedly until the LED FM radio indicator light turns green.
2. Press and hold the Scan & Play/Pause button on the speaker for a second and then release, or press the Scan & Play/Pause button on the remote control. All available stations will be searched and then stored into the memory automatically.
3. After scanning, press the numeric buttons on the remote control to select 1-20 pre-set stations. Eg. Pressing 1 means pre-set station 1, pressing 2 and 0 means pre-set station 20 etc.

Note: After scanning and saving stations, if the Wireless Tower Speaker is turned off and then back on, be sure to select your preset stations with the numeric buttons. If you press the Scan & Play/Pause button again, the scanning process will start again.

Listening to the radio by manual search

Note: To enhance radio reception, fully unwind and extend the FM antenna wire located on the back of the speaker.

Using as a Wired Speaker

1. Quick press the Mode/Light button on the speaker or the Mode button on the remote control repeatedly until the LED AUX indicator light turns green.
2. Connect one end of the 3.5mm auxiliary cable to the AUX in port on the front of the speaker, and the other end of the cable to an external device's headphone port (smartphone, tablet, MP3 player).
3. Use the controls on your connected device to control music playback and volume.

Note: When a device is plugged into the AUX in jack, only the volume can be controlled by the buttons on the speaker and remote control. You must use your connected device to control music playback.

Troubleshooting

<p>I can pair the Disco Ball Sound Tower with my Bluetooth device, but I cannot hear any music.</p>	<p>Make sure your Bluetooth device supports Bluetooth profile.</p>
	<p>Turn up the volume on your Bluetooth Device</p>
	<p>You may have to un-pair the speaker, then re-pair to your device.</p>
	<p>Use your connected device to increase the volume</p>
<p>My Bluetooth Device is not able to pair with the Disco Ball Sound Tower</p>	<p>Make sure the Disco Ball Sound Tower is turned on before beginning the pairing process</p>
	<p>Keep the Disco Ball Sound Tower and Bluetooth enabled device within 3 feet of each other during the pairing process.</p>
	<p>Press the Mode/Light button on the speaker or the Mode button on the remote control repeatedly until the LED Bluetooth indicator light flashes green and a tone is heard.</p>
	<p>Check that your device’s Bluetooth feature is turned on.</p>
	<p>Try repeating the pairing process, see “Pairing the Speaker”.</p>
<p>I cannot get the Disco Ball Sound Tower into pairing mode.</p>	<p>Make sure the Disco Ball Sound Tower is turned ON before beginning the pairing process.</p>
	<p>Press the Mode/Light button on the speaker or the Mode button on the remote control repeatedly until the LED Bluetooth indicator light flashes green and a tone is heard.</p>
	<p>The turntable is now in pairing mode.</p>

Disposal Information

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE APPLIANCE IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the appliance must NOT be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.



AUDIAL

**Wellington Grove,
Stockport, SK2 6RH**