



Edwardian Traditional Hanging Airing

Instruction Manual

Model Reference: GLEA01

List of Contents

- 4 x 1.2m Wooden Laths for Edwardian Airing
- 1 x Double Pulley
- 1 x Single Pulley
- 1 x 10m Rope
- 1 x Cast Iron Cleat
- 2 x Screws (38mm length x 4mm width)
- 2 x Wall Plugs (34mm length)

Thank you for buying the Giani Edwardian Traditional Hanging Clothes Airing. To get the best from your Giani Airing follow the below instructions accordingly:

1. Choose a position for the airing. It needs to be close to an adjacent wall, into which the cleat will be screwed to secure the rope.
2. Locate a wooden beam or joist within your ceiling into which the pulleys should be screwed. This can be done by gently tapping the ceiling with the handle of a screwdriver. A hollow sound is heard where there is no joist, keep tapping across the ceiling until the sound changes to a solid sound to locate the beam.

PULLYS MUST ALWAYS BE SCREWED INTO ROOF JOISTS.

3. Prepare two ceiling fixing points so that they are:

100cm apart for the **1.2m (4ft)** length airing.

These distances are a guide and can be altered slightly if necessary.

4. Using a **4mm drill bit**, drill 2 pilot holes into the ceiling at the fixing positions you have marked ready to screw the pulleys into. Make sure that you drill the holes **deep enough** to accommodate at least 2/3 the length of the pulley screw. Use a couple of drops of **light oil** or washing up liquid on the pulley screw thread to help the screw easily twist into the hole.

5. The **double pulley** fixing point should be the one closer, of the two, to the place where the cleat is going to be mounted.


The **single pulley** fixing point should be furthest from the cleat.

Screw the pulleys into the pre-drilled holes you made earlier in the ceiling at these points.

6. **Diagram 1** shows how the rope should be threaded through the pulleys. Thread the rope ends through the eyes of the cast iron airing ends and tie them off so they are securely attached to the cast iron airing ends.


7. Insert the wooden lath rails into the slots leaving:

10cm at both ends for the **1.2m (4ft)** length airing

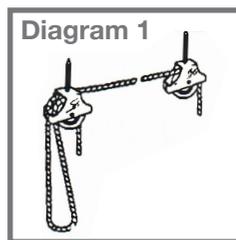


8. Pull the two cords until the airer ends are approximately 20cm from the pulleys on the ceiling. Find a place on the wall, between waist and chest height, to fix the cleat making sure the rope is not hindering the upward and downward movement of the rails (**Diagram 3**). Fix the cleat to the wall using the wall plugs and screws provided.

9. **Diagram 2** Let down the airer to a height, at which you feel comfortable, to load with laundry. Tie a knot in the looped cord at the point it is at on the cleat. This is so you can hook the rope on the cleat while you are loading your airer. **This knot is really IMPORTANT** as it locks the 2 ropes together preventing them moving at different rates. The airer **MUST be horizontal** when the knot is tied.

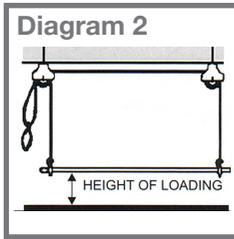

Hang clothes to air or flowers and herbs to dry

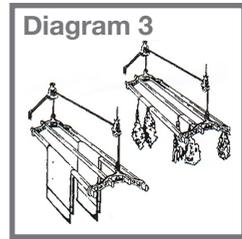

10. Pull up the airer until the airer is at the required drying height close to the pulleys. Tie another knot in the two cords at the point it is with the cleat. This is so you can hook the rope on the cleat to hold your airer up in the air while your clothes are drying. Your airer is now operational and will give you many years of problem free use.



NOTE: Hooks are not included. You can purchase these from any hardware store.

After Sales Support

If you need help using your Airer, please contact Giani Ltd:-

- Telephone: 0161 480 6204
- Email: info@gianiuk.co.uk
- Website: www.gianiuk.co.uk
(replacement instruction manuals are available to download).

Product Guarantee (UK Only)

If your ailer fails within 1 year from the date of purchase, the retailer will replace it free of charge, provided:

- You have not misused, neglected or damaged it
- It has not been modified (except by Giani Ltd)
- It was not purchased second hand
- It has not been used commercially
- You can supply proof of purchase, indicating the price you paid and where and when the appliance was purchased.

This guarantee does not affect your statutory rights.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE APPLIANCE IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the appliance must NOT be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Giani
LAUNDRY