



IM-GCHD9002C

19022019



Square Buffet Server

Instruction Manual

Model Reference: GCHD9002C

INTRODUCTION

Thank you for choosing the Cucina by Giani Square Buffet Server. Before use, please read this manual. It gives important instructions about safety, use and maintenance of your appliance. Please keep for future reference.

INDEX

Important Safeguards.....	02
Technical Specification.....	03
How To Use.....	04
Cleaning and Maintaining.....	04
Disposal Information.....	05

IMPORTANT SAFEGUARDS

When using your Buffet Server, basic safety precautions should always be followed:

- Read all instructions.
- Check that the voltage indicated on the rating plate corresponds with that of your household mains power supply
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not immerse the appliance in water or any other liquids.
- Always unplug the power cord from the mains socket after the appliance has been used, and before it is cleaned.
- This appliance must only be used by responsible adults.
- Close supervision is required when using this appliance near children.
- Never leave the appliance within reach of children.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Repairs should **only** be performed by a qualified electrician.
- This appliance is intended for household use only and should not be used for commercial purposes.
- Do not operate the appliance with a damaged plug or cord, after a malfunction, or after being dropped or damaged in any way.
- Do not use the appliance for anything other than its intended use.
- Do not touch the hot surfaces, always use the handles (They are extremely hot).
- Never place your hands over the steam vents or cover when the appliance is in operation.

- Ensure the appliance is used on a stable, flat, heat resistant surface.
- Any meat dishes placed in the buffet server must be thoroughly cooked first. Do not place raw meat in the buffet server.
- If the supply cord is damaged, it must only be replaced by a qualified electrician.
- This appliance can be used by children aged from 8 years old and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Do not use an extension cord, external timer or remote control system with this appliance.

TECHNICAL SPECIFICATION

Voltage	220-240V
Power	200W

HOW TO USE THE BUFFET SERVER:

Note: It is normal for there to be a plastic smell when using the buffet server for the first time. This will fade with use.

WARNING: This appliance will get hot during use, please use extreme caution.

- Before first use, wash the individual containers with warm soapy water and dry thoroughly. Wipe down the appliance with a soft damp cloth and dry thoroughly.
- Place the appliance on a heat resistant flat surface.
- Plug the buffet server into the mains power supply and switch On. The indicator light will illuminate red and will turn Off when the desired temperature is reached.
- Place the prepared food into each of the warming pans and adjust the temperature to the desired heat. The indicator light will cycle On and Off whilst maintaining the correct temperature.
- It is not recommended to keep this appliance On for more than 6-8 hours at any one time.
- After use, unplug the appliance from the mains power supply and allow to cool down thoroughly before cleaning and stored away.

HOW TO USE THE WARMING PLATE:

- Place the warming plate on a stable, flat and heat resistant surface.
- Pre-heat the appliance for 10 minutes.
- Food placed on the tray must be pre-cooked and already hot as this appliance is not designed for heating/cooking food
- When you have finished using the appliance, unplug from the mains power supply and allow to cool thoroughly before being stored away.

CLEANING AND MAINTENANCE

- **Caution:** Always ensure the appliance is unplugged from the mains power supply and has thoroughly cooled before cleaning or storing.
- Remove each warming plate, the lid and the frame and wash in warm, soapy water. Rinse well and dry thoroughly.
- Wash the warming tray with warm soapy water with a soft, moist cloth, do not use any abrasive cleaning agents or allow water to spill or seep into the frame. Never immerse the warming plate, warming tray, cord or plug in water or any other liquid.
- Re-assemble the buffet server and store in a cool, dry place.

DISPOSAL INFORMATION

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.



Giani Limited - SK2 6RH