



CD82 08052018



CD Boombox

Instruction Manual

Model Ref: CD82

Introduction

Thank you for choosing this CD Boombox. This product is manufactured to the highest standards of performance and safety.

Before use, please read this manual carefully. It gives important instructions about safety, use and maintenance of your device.

 
Remove all packaging material. You may wish to keep the packaging for future use or storage of your device. Alternatively, dispose of accordingly.

Important Safety Information


WARNING - To reduce the risk of fire, electric shock, or injury:

1. This appliance is for domestic use only. Do not use outdoors or on wet surfaces.
2. Do not handle the plug or appliance with wet hands.
3. Do not immerse the main body in water.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
5. Children must not play with the appliance.
6. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
7. Keep the appliance and its cord out of reach of children less than 8 years.
8. This product is not a toy.
9. Do not use the appliance if any parts appear to be faulty, missing or damaged.
10. Always switch off at the mains supply before carrying out any cleaning, performing user maintenance or changing accessories.
11. Do not use the appliance if it has been dropped or damaged in any way.
12. Check to ensure that the electricity supply matches that shown on the rating plate.
13. Only use the attachments/accessories supplied with the product or recommended by Audial.
14. If the supply cord is damaged, it must be replaced by a qualified service agent in order to avoid a hazard

15. Only use this appliance for its intended domestic use. JDW will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.
16. Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
17. Keep the power supply cord away from any parts of the appliance that may become hot during use.
18. Do not disconnect the appliance from the mains power supply by pulling the cord, switch it off and remove the plug by hand.
19. Do not move the appliance when it is in use.
20. Use of an extension cord with the appliance is not recommended.
21. This appliance should not be operated by means of an external timer or separate remote control system.
22. Keep the appliance away from flammable materials.

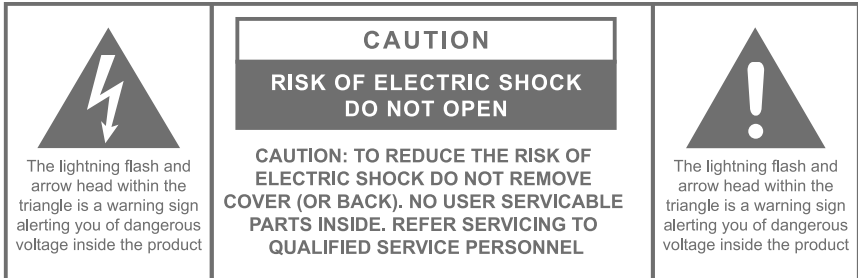

PRODUCT OVERVIEW

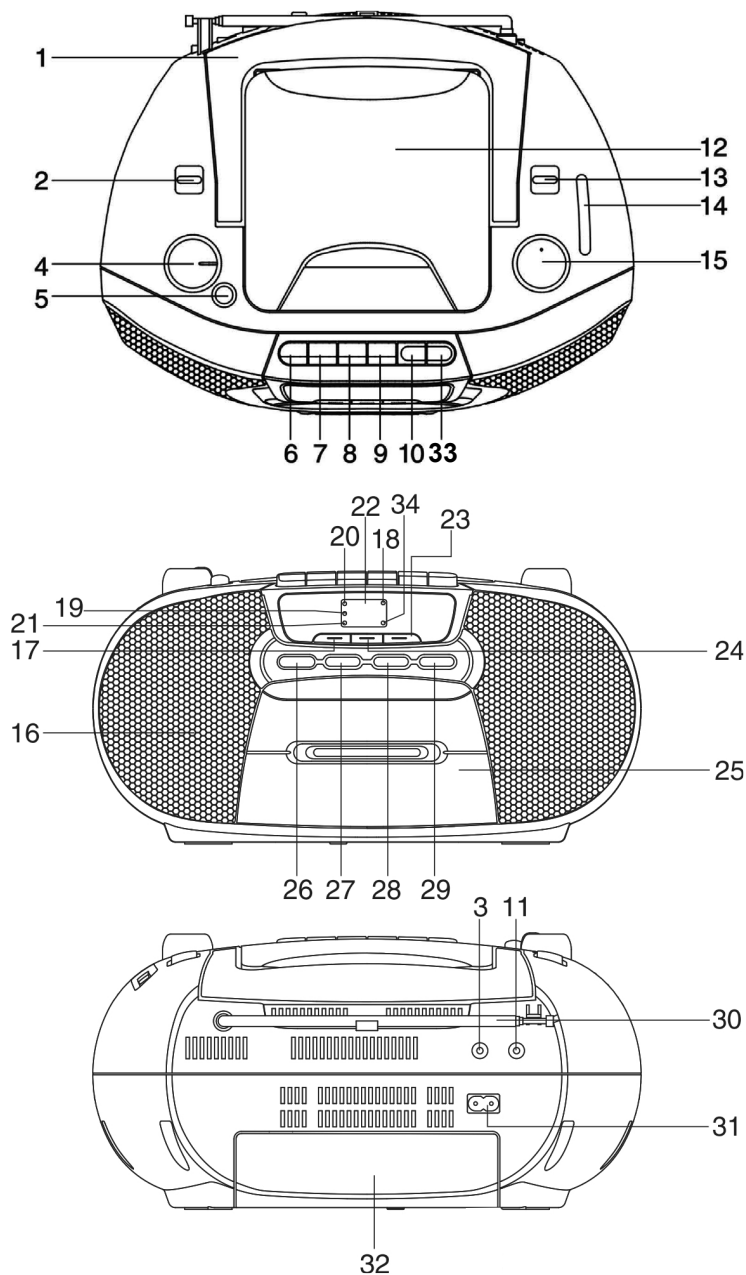 

BOOMBOX CONTROLS

- | | |
|---------------------------------|---------------------------------------|
| 1. FOLDING HANDLE | 20. POWER INDICATOR |
| 2. FUNCTION SWITCH | 21. PROGRAM INDICATOR |
| 3. AUX IN JACK | 22. LED DISPLAY |
| 4. VOLUME CONTROL | 23. REPEAT BUTTON |
| 5. BASS BUTTON | 24. RANDOM BUTTON |
| 6. CASSETTE PAUSE
KEY | 25. CASSETTE
COMPARTMENT |
| 7. CASSETTE STOP/
EJECT KEY | 26. CD SKIP/SEARCH
BACKWARD BUTTON |
| 8. CASSETTE FAST
FORWARD KEY | 27. CD SKIP/SEARCH
FORWARD BUTTON |
| 9. CASSETTE REWIND
KEY | 28. CD STOP BUTTON |
| 10. CASSETTE PLAY KEY | 29. CD PLAY/PAUSE/
STANDBY BUTTON |
| 11. PHONES JACK | 30. FM TELESCOPIC
ANTENNA |
| 12. CD COMPARTMENT | 31. AC SOCKET |
| 13. BAND SELECTOR | 32. BATTERY
COMPARTMENT |
| 14. DIAL SCALE | 33. CASSETTE RECORD
KEY |
| 15. TUNING CONTROL | |
| 16. SPEAKERS | |
| 17. PROGRAM BUTTON | |
| 18. FM STEREO
INDICATOR | |
| 19. REPEAT INDICATOR | |

INFORMATION ON LASER PRODUCTS

REPRODUCTION OF LABELS

1. CLASSIFICATION LABEL, PLACED ON REAR ENCLOSURE.

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

2. WARNING LABEL, PLACED INSIDE THE UNIT.

CAUTION: DO NOT OPEN THE UNIT. THERE ARE NO USER SERVICEABLE PARTS INSIDE THE UNIT; CONSULT ALL SERVICING TO QUALIFIED SERVICE PERSONNEL.

Discs for Playback

This system can playback all digital audio CD, finalized digital audio CD-Recordable (CD-R) discs, finalized digital audio CD-Rewritable (CD-RW) discs and CD-DA format digital audio CD/CD-R/CD-RW discs.

POWER SOURCE

This unit is designed to be operated on AC/DC.

AC OPERATION

Plug the smaller end of AC power cord into AC jack on unit and the plug end into the socket. The batteries will be automatically disconnected.

DC OPERATION

Open the BATTERY COMPARTMENT DOOR. Install 6 pcs 1.5V UM-1/D size batteries (not included) into compartment. Please follow correct polarities as indicated.

CAUTION

- Remove batteries if they are flat or not being used for a long period of time.
- Batteries contain chemical substances, so they should be disposed of properly.

USING THE BOOMBOX

SWITCHING ON THE UNIT

Set the FUNCTION SWITCH to CD/AUX or RADIO or TAPE position.

NOTE: In CD/AUX mode when the unit is not providing the main function for 15 minutes, the unit will automatically switch into standby mode. To turn on the unit again, press "STANDBY" button or plug the unit.

ESD (Electrostatic Discharge) – The product may reset, or not reset to operation of control due to electrostatic discharge, just switch off and switch on again.

TO ADJUST VOLUME

Rotate the VOLUME CONTROL back and forth to increase and decrease volume.

BASS BOOST SYSTEM

For more extra bass, press the BASS BOOST button. Press again to turn off bass.

AUX-IN OPERATION

This unit has provided special AUX jack, through this jack other audio sources can be connected to this unit and be amplified.

1. Set the FUNCTION switch to CD/AUX position.
2. Connect the audio cable into the AUX-IN jack and the other end connect to the AUDIO OUT jack of the external audio source. The unit will change to AUX mode automatically.
3. Adjust the volume of the main unit to your desired level. Press PLAY of the external audio source to start playback.

HEADPHONE JACK

For private listening, insert a 3.5mm headphone (not included) into the HEADPHONE jack (4). The SPEAKER output would be automatically cut off.

CAUTION: LISTENING AT A HIGH VOLUME OVER A LONG PERIOD IS NOT GOOD FOR YOUR EARS.

USING THE RADIO

TUNING IN RADIO STATIONS

1. Slide the FUNCTION switch to select the desired wave band: AM/FM ST.
2. Turn the TUNING DIAL to the required station.
3. Turn the VOLUME CONTROL to comfortable volume level.
4. Extend the TELESCOPIC ANTENNA to its full length if you are listening to FM broadcasting. If the reception is poor try moving the device to a better position.

Note: The FM STEREO indicator will be on if you are receiving FM stereo program.

5. Turn off the radio by switching the FUNCTION switch to "TAPE " position

CASSETTE OPERATION

PLAYBACK OF CASSETTE

Be sure to tighten any slack tape in the cassette before use, using either a pencil or a ball-point pen, simply insert the pen or pencil into the centre of spool and rotate to remove slackness. Depress the STOP/EJECT button to open the cassette door.

Insert the cassette into the compartment with the open end facing upwards and the full reel on the left hand side, push the cassette well down and close the door, be sure not to touch the tape surface, Set the Function switch to "TAPE" position and press the cassette play button. To stop playback, press the STOP/EJECT button once. To release the cassette, press the STOP/EJECT button again.

AUTO STOP

When the tape reaches the end during playback, the built-in auto stop system will release the depressed play button.

RADIO RECORDING

1. Install a cassette tape.
2. Set FUNCTION SWITCH to “RADIO” position. After selecting the desired band and turn the TUNING DIAL to desired broadcast station. Then push down RECORD BUTTON and PLAY BUTTON simultaneously.
3. After recording the desired broadcast, depress the STOP/EJECT BUTTON, and then set FUNCTION SWITCH to “TAPE” position in order to listen to the recorded broadcast.
4. If you desire to play recorded broadcast, please follow the instructions explained in playback section.

Note: When you record over a previously recorded tape, the original recording is automatically erased and replaced by the new recording.

RECORDING FROM CD

1. Insert a blank cassette tape into the tape compartment.
2. Slide the FUNCTION switch to CD/AUX position.
3. Load a CD and select the desired track you want to record.
4. Press CD PLAY/PAUSE button to start playback. Press RECORD key to begin recording. RECORD key and PLAY key go down simultaneously.
5. Press PAUSE key to interrupt or edit recording. Press it again to resume recording.
6. Press STOP/EJ. Key to end recording.
7. To hear what you recorded, follow instructions in PLAYING A CASSETTE TAPE.

RECORDING FROM AUX

1. Insert a blank cassette tape into the tape compartment.
2. Slide the FUNCTION switch to CD/AUX position.
3. Connect the audio cable into the AUX IN jack and select the desired track you want to record.
4. Press RECORD key to begin recording. RECORD key and PLAY key go down simultaneously.
5. Press PAUSE key to interrupt or edit recording. Press it again to resume recording.
6. Press STOP/EJ. Key to end recording.
7. To hear what you recorded, follow instructions in PLAYING A CASSETTE TAPE.

 
TYPES OF CASSETTE

Use only good quality cassettes (IEC TYPE 1) for making recordings.

The use of C120 cassettes is NOT recommended in this machine.

CARE OF CASSETTE MECHANISM

Gently clean the tape head and pinch wheel/capstan assemblies after every 10 hours of using the unit.



The erase head and play head and the surface of the pinch roller are delicate and must not be touched with metal objects such as screwdrivers. You may find it easier to clean the assembly by pressing the PLAY button to bring head and pinch roller into view. Be sure to press the STOP button after cleaning the mechanism.

Damage to the pinch wheel can occur if the unit is left in PLAY mode with the power switch off. Under no circumstances should you attempt to lubricate any part of the machine.

USING THE CD

Set the FUNCTION SWITCH to “CD/AUX” position. Press the CD door OPEN/CLOSE to open the CD door to put in a compact disc. Close the door and it will start reading. The LED display always shows the number of tracks on the disc

Playing The Entire Disc

1. Playback will start by pressing CD PLAY/PAUSE button, playback starts with the first track. The display will show the current track number.
2. To interrupt playback, press CD PLAY/PAUSE button.
3. To resume playback, press CD PLAY/PAUSE button once again.
4. To stop playback, press CD STOP button.

Note:

To ensure good system performance; wait until the disc tray completely reads the disc before proceeding. If no disc is loaded into the compartment, or the disc is placed upside down, the display will show “NO DISC”.

SELECTING A DESIRED TRACK/PASSAGE

To select a desired track

1. Press SKIP/SEARCH FORWARD/BACKWARD button repeatedly in stop mode or during play until the desired track appears on the display.
2. Press PLAY/PAUSE button to start play.

To search for a particular passage during playback (track scanning at high speed)

1. Press and hold SKIP/SEARCH BACKWARD/FORWARD button to scan the current playing track at high speed until desired point(passage), then release the button.
2. Playback will start again from this point.

REPEAT PLAY

When playing, press REPEAT button once. REPEAT INDICATOR will light up and flash for playing the same track only. If repeat all tracks, press the REPEAT button again, REPEAT INDICATOR will light up. To cancel repeat play, press the REPEAT button until the repeat indicator disappears

PROGRAM PLAY

Programming tracks of disc are possible when playback is stopped. Up to 20 tracks can be stored in the memory in any order.

1. Press “PROG” button to make program memory in stop mode. Program indicator will light up and flash
2. “ 0 ” will be shown flashing on the display,
3. Press CD SKIP/SEARCH FORWARD/BACKWARD button to select a track number. The track number will show on display.
4. Press the “PROG” button to store the track number.

5. “ 0 ” flashes again. Repeat step (3) to (4) to program other desired tracks.
6. After 20 tracks have been programmed, all the programmed track numbers will be shown one by one.
7. Press CD PLAY/PAUSE button, playback will start from the first programmed track.
8. You can press CD SKIP SEARCH FORWARD/ BACKWARD button to select the track number in memory.
9. In stop mode, press STOP button to cancel the program play and the program indicator will disappear.

RANDOM PLAY

Press the CD RANDOM button in Play/Stop mode, the current track number and “ - - ” will flash again and again. And then press the CD PLAY/PAUSE button. Playback will start from any one track (not in the order of the disc). To cancel the RANDOM, press the RANDOM function button again.

Product Specifications

CD Section

Channels	2 Channels
Optical Pick-Up	3 Beams Laser
Frequency Response	100Hz - 16 KHz

Radio Section

Receiving Band	AM/FM
Tuning Range	AM 530-1600 KHz FM 87.5-108 Mhz
Antenna	FM Rod Antenna, AM built-in ferrite bar

General

Output Power	1.5W x 2
AUX In Jack	3.5mm
Phones Jack	3.5mm
Power Source	AC 230V ~ 50Hz DC 9V 1.5V UM-1/D x 6 pcs
Power Consumption	15W

Cassette Section

Recording System	Tracks 2 Channel (Stereo)
Frequency Response	125 - 6.3Khz
Wow and Flutter	0.35% WRMS (JIS)

Accessories

Instruction Manual
AC Cord

COMPACT DISC MAINTENANCE

 
1. Always use a compact disc bearing the mark as shown.



2. Notes on handling discs
 - Take care when removing the disc from its storage case and loading it.
 - Do not touch the reflective recorded surface.
 - Do not stick paper or write anything on the surface.
 - Do not bend the disc.
3. Storage
 - Store the disc in its case.
 - Do not expose discs to direct sunlight or high temperatures, high humidity or dusty places.
4. Cleaning a disc
 - Should the disc become soiled, wipe off dust, dirt and fingerprints with a soft cloth.
 - The disc should be cleaned from the centre to the edge.



CORRECT



INCORRECT



FROM THE CENTRE TO THE EDGE

- Never use benzene, thinners, record cleaner fluid or anti-static spray.
- Be sure to close the CD door, so the lens is not contaminated by dust.
- Do not touch the lens.

Disposal Information

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE APPLIANCE IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the appliance must NOT be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.





**Wellington Grove,
Stockport, SK2 6RH**