

Giani



Heated Airer

Instruction Manual

Model Reference: GCETW39AL

Contents

Introduction	page 01
Safety Instructions	page 01
Instructions for use	page 02
Directions for use	page 03
Directions for use Continued/Storage	page 04
Troubleshooting	page 05
Recycling	page 05
Electrical Connections	page 05
Technical Specifications	page 06
Disposal Information	page 06

Introduction

Thank you for buying the Giani Heated Clothes Airer.
With over 6m of drying space and quick heat up time, the airer is ready to start drying your laundry in minutes.

 
To get the best from your Giani Heated Clothes Airer, please take a few moments to read these instructions, and keep them in a safe place for future reference.

Safety Instructions

- Please read all instructions before using the Giani Heated Clothes Airer.
- Make sure your electricity supply matches the voltage shown on the appliance.
- The Heated Clothes Airer is for household use only. It is not suitable for commercial use, or for use outdoors. It must be used for its intended purpose.
- To protect against electric shock, do not immerse the appliance, power cord or plug in water or any other liquid.
- The appliance must be placed on a level, dry surface at least 1.5 metres away from heat or water sources.
- Never pull or carry the Heated Clothes Airer by its cord. Do not allow the power cord to touch hot surfaces or sharp edges. Do not let it trail over the edges where it may be pulled by children or tripped over.
- Always switch off and unplug the Heated Clothes Airer after use leaving it to cool down completely before storing it away. Do not wind the power cord around the Heated Clothes Airer.
- The appliance is not intended for use by children or infirm people unless they have been adequately supervised by a responsible person to ensure they can use it safely. Children should be supervised to ensure they do not play with the appliance.
- Please do not use the appliance if it has been dropped or damaged in any way. Check the power cord regularly for signs of damage. Never attempt to repair the appliance or replace the cord yourself as this may lead to severe injury or electric shock.

Using your Giani Heated Clothes Airer for the first time:

Carefully unpack the Heated Clothes Airer and remove any packaging. Place the unit on a level, dry surface ready for use.

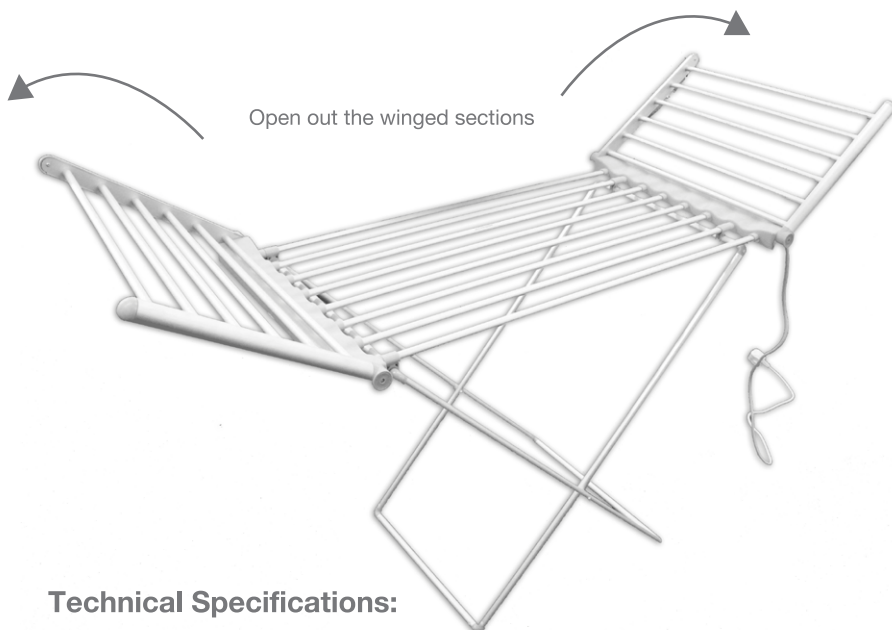

Technical Specifications:

Power consumption: 145W
Operating voltage: 230V
Maximum load: 8kg

Instructions for use:

1. Assemble the airer as shown in the diagram above.
2. Plug the airer in and switch on using the on/off switch. The position of the switch is shown in the diagram above.
3. When you have finished using the airer, switch off and unplug from the power source.

Troubleshooting:

Problem - the Heated Clothes Airer is not heating up.

Solution - check the Heated Clothes Airer is plugged in and the on/off switch is illuminated.

Directions for Use

1. Remove the Heated Clothes Airer from all packaging.
2. Unattach the mains power cable from its packaging position by cutting the holding plastic clip with a pair of scissors. Take care NOT to cut the mains cord or damage the frame whilst cutting the clip.
3. Remove the wire twist clip on the mains cable.
4. Before first use, the folding leg frame has to be attached to the main airer frame.
 - a. Lay main airer frame on its back on a suitable flat surface. (floor/carpet preferably) FIG 1.
 - b. Ensure that the 2x leg clips on the outer 2 main frame bars are both slid to the same end FIG 2. Then slide the two inner leg clips to the opposite end of the main frame. FIG 3.
 - c. Position the folding legs over all 4 leg clips and clip into place by pushing down on the leg frame around the clip. Be careful not to force the leg frame too hard into the clip causing damage to the main frame. Ensure that all 4 leg clips are fully clipped on to the leg frame. FIG 4.

FIG 1

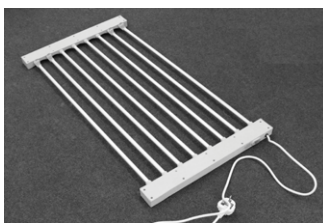 


FIG 2



FIG 3


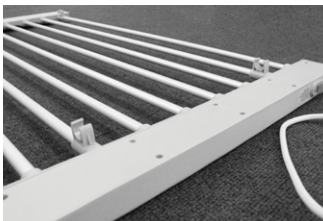 


FIG 4

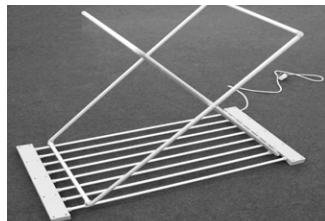 

- d. The leg frame will now be able to slide along the main frame in either the open or closed position.
- e. For maximum safety/stability of the airer, please always ensure that the leg frame is fully opened to the widest possible position at either end of the main frame.

Directions for Use Continued

- f. Finally once assembled, the airer wings can be opened outwards to the operating position or folded away for storage.

Operation:

1. Once the airer has been assembled and positioned in your desired operating location plug the airer into the suitable mains power socket.
2. Press the red power switch on the main airer to the (-) position. The pilot light will illuminate red. FIG 5.
3. After approximately 2 minutes the Heated Clothes Airer will warm all 8x top rails of the main frame to its optimum operating temperature.
4. CAUTION - The top 8 rails of the main frame will become warm during use.

DO NOT TOUCH OR HOLD THESE RAILS FOR MORE THAN A FEW SECONDS TO AVOID BURNS.

FIG 5



FIG 6



5. The unit is now ready for you to place clothes on the rack for airing. DO NOT place wet clothes directly from the washing machine onto the airer. Clothes must be part dried before placing on the airer.
6. When the airer is not required for use, switch off by again pressing the red mains button to the "O" position. Always unplug the airer from the mains power supply when not in use.

Storage:

1. Ensure the airer is unplugged from the mains at all times when not in use. Allow the airer to fully cool down before folding away for storage.
2. Stand the airer upright on the end opposite to the power cable joint and on/off switch on the main frame. Slide the folding legs against the main frame so that the legs fold flat for storage. FIG 6.

Troubleshooting

Problem - the Heated Clothes Airer is not heating up.

Solution - check the Heated Clothes Airer is plugged in and the on/off switch is illuminated.

Recycling your electricals

Along with many other high street retailers, Giani has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country. Visit www.recycle-more.co.uk to find your nearest recycling point.

 
Electrical Connections

This appliance must be earthed

This appliance is fitted with a fused three pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications. If the fitted plug is not suitable for your socket outlets, it should be cut off and carefully disposed of. To avoid an electric shock, do not insert the discarded plug into a socket.

Fitting a new plug

If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown here. The wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

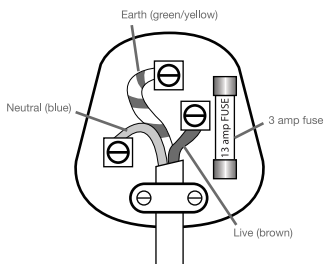

Connect BLUE to Neutral (N)
Connect GREEN & YELLOW to Earth (E)
Connect BROWN to Live (L)
13 amp fuse to be used

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured green and yellow **MUST** be connected to the terminal which is marked with the letter E (Earth) or coloured green. The wire which is coloured blue **MUST** be connected to the terminal which is marked with the letter N (Neutral) or coloured black. The wire which is coloured brown **MUST** be connected to the terminal which is marked with the letter L (Live) or coloured red.

Before refitting the plug cover, check that there are no cut or stray strands of wire inside the plug. Use a 13 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are at all unsure which plug or fuse to use, always refer to a qualified electrician.

Note: After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EEC Directives: 73/23 EEC (Low Voltage Directive) and 89/336 EEC (EMC Directive).

Technical Specifications:

Power consumption: 120W

Operating voltage: 230V

Disposal Information

Do not dispose of this item in normal household waste. Used electrical appliances and electronic equipment must be disposed of separately. Please contact your local waste disposal authority for details of local arrangements.

THIS APPLIANCE IS EARTHED

IF THE SUPPLY CABLE OR CORD IS DAMAGED DO NOT USE

IF IN DOUBT CONTACT A QUALIFIED ELECTRICIAN

FOR DOMESTIC USE ONLY





The logo for Giani, featuring the word "Giani" in a stylized, cursive script. The letter 'i' has a long, horizontal tail that sweeps under the rest of the word.

Giani Ltd
Manchester, UK, SK2 6RH
e-mail: support@gianiuk.co.uk