 


CUCINA

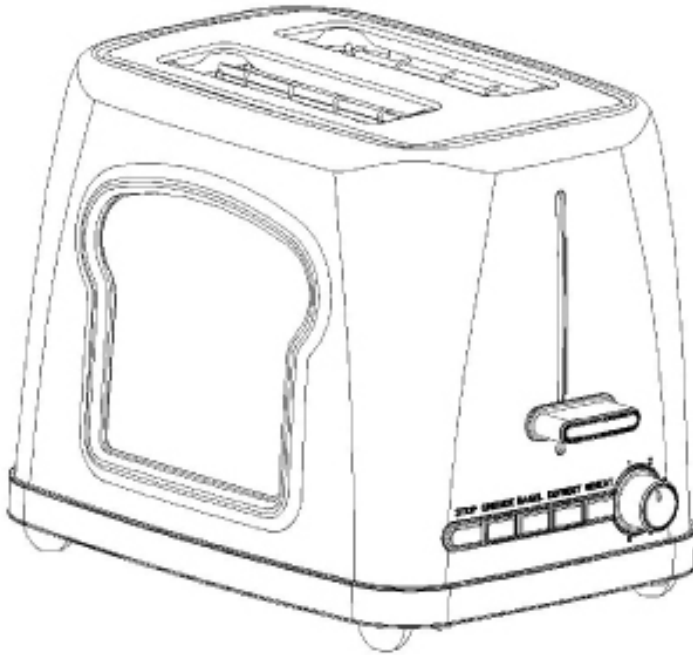

Window 2 Slice Toaster

Instruction Manual

Model Reference: GCJS-2509W

Introduction

Thank you for choosing the Giani Window 2 Slice Toaster. All products brought to you by Giani are manufactured to the highest standards of performance and safety.

Before use, please read this manual. It gives important instructions about safety, use and maintenance of your appliance.

Remove all packaging material. You may wish to keep the packaging for future use or storage for your appliance. Alternatively, dispose of accordingly.

Index

Important Safety Instructions.....	02
Product Overview.....	04
Function Buttons.....	04
Browning Dial.....	05
Technical Information.....	05
Before First Use.....	05
Using Your Toaster.....	05
Hints and Tips.....	06
Cleaning and Maintenance.....	06
After Sales Support.....	07
Product Guarantee.....	07

Important Safety Instructions

Please read ALL instructions before using this appliance and keep safe for future reference.

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. This appliance is for domestic use only. It should not be used for commercial purposes.
2. Only use this appliance for its intended domestic use. Giani Ltd will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.
3. Do not use outdoors or on wet surfaces.
4. Do not handle the plug or appliance with wet hands.
5. Do not immerse the main body in water. Avoid any liquids entering the appliance as this will cause an electric shock or will short circuit the appliance.
6. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
7. Children must not play with this appliance.
8. Cleaning and user maintenance must not be performed by children without supervision.
9. This product is not a toy.
10. Do not use the appliance if any parts appear to be faulty, missing or damaged.
11. Do not use the appliance if it has been dropped or damaged in any way.
12. Do not leave the appliance unattended when connected to the mains supply or in use.
13. Always unplug from the mains supply before carrying out any cleaning or performing user maintenance.
14. Make sure the appliance has cooled down completely before cleaning, emptying the crumb tray or storing away.
15. Check to ensure that your electricity supply matches that shown on the rating plate.
16. If the supply cord is damaged, it must be replaced by a qualified service agent in order to avoid a hazard.
17. Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
18. Make sure the power cord does not come into contact with areas of the appliance that become hot during use.
19. Never touch the top of the appliance when in use as it becomes extremely hot.
20. Always use the appliance on a dry, stable, heat resistant surface.
21. Do not place the appliance against a wall or directly next to another appliance. Leave at least 20cm of free space around the appliance when in use.
22. To avoid injury or possible fires, do not cover the appliance when in operation.
23. Do not move the appliance when it is in use.
24. Do not disconnect the appliance from the mains power supply by pulling the cord, switch it off and remove the plug by hand.
25. Do not store in direct sunlight or high humidity conditions.
26. Use of an extension cord with the appliance is not recommended.

27. This appliance should not be operated by means of an external timer or separate remote control system.

28. Keep the appliance away from flammable materials.

CAUTION: If the bread carriage handle jams during use (eg: because the bread slices are too thick) and the bread starts to burn, unplug the appliance immediately, allow to cool, then empty and clean the appliance.


CAUTION: Do not use this appliance for defrosting food other than bread slices, bagels or baguettes.



CAUTION: HOT SURFACE!


Product Overview

- 1 - Wide Toasting Slots
- 2 - Toasting Frame
- 3 - Bread Carriage Lever
- 4 - Adjustable Browning Dial
- 5 - Function Buttons
- 6 - Viewing Window
- 7 - Removeable Crumb Tray

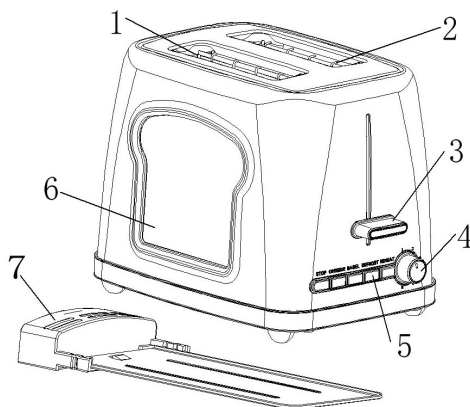

Function Buttons

Button	Function
STOP	Will immediately stop the toasting cycle. During operation, if you think the bread is toasted enough or you require to stop the cycle, you can cancel the process by pressing the STOP button.
ONESIDE	Enables you to toast just one side of your bread, bagel and baguette.
BAGEL	When pressed, the toaster allows the bread carriage lever to high lift, enabling toasting for smaller items such as bagels & crumpets.
DEFROST	Select your required browning setting and when pressing DEFROST, the toasting time automatically adjusts to first defrost and then toast to your chosen browning setting.
REHEAT	Will re-heat your toast without adding any further browning. Ideal for when your toast has completed its cycle but you are not ready to use, simply re-heat when required.

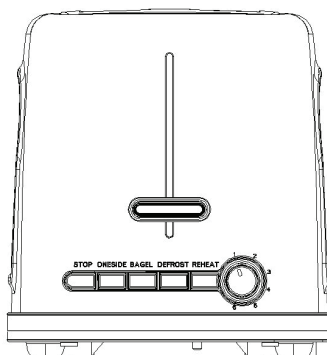

Browning Dial

The browning setting required will vary according to the moisture content and thickness of the bread.

Browning Level	Browning Time
1 (light browning)	60 seconds
2	85 seconds
3	125 seconds
4	175 seconds
5	215 seconds
6 (dark browning)	240 seconds

Technical Information

Voltage	220-240V
Rated Power	1200W

Before First Use

1. Remove all packaging materials, stickers and labels.
2. Check that the toasting slots are empty.
3. Set the browning control to the highest setting (6)
4. Plug the appliance into the mains supply and switch on at the socket.
5. Operate the toaster without bread, to cure the new elements.
NOTE: The elements smoke a bit, but this is nothing to worry about.
6. Allow to cool, then wipe the main unit with a soft damp cloth and dry thoroughly.

Using Your Toaster

1. Place your toaster on a level, stable, heat resistant surface.
2. Plug the appliance into the mains socket and switch on.
3. Select the required browning setting.
4. Place the bread slices into the toasting slots. The maximum thickness allowed is 38mm / 1.5".
5. Press down the bread carriage handle until it stops (at the same time the grid inside the slots will tighten around the bread in order to keep it away from the quartz heating elements).
6. Release the pressure and the handle will stay in the lowered position. The heating process has begun.
NOTE: If the handle comes up immediately, check the appliance is plugged in as the bread carriage cannot lock if the toaster is not connected to the electricity supply.
7. When toasting is complete the toast will pop up.
8. Switch off at the mains socket, unplug and allow to cool.

Hints and Tips

- *When toasting more than one slice, use slices of similar size, thickness and freshness.*
- *Old (yesterdays) bread contains less moisture, so makes crispier toast.*
- *Old or thin bread cooks faster than fresh or thick bread - use a light setting.*
- *Sweet bread products (tea cakes, fruit loaf etc) brown much more quickly than ordinary bread, so should be toasted on a lighter setting.*

Cleaning and Maintenance

1. Make sure the toaster is unplugged from the mains supply and fully cooled down.
2. To remove breadcrumbs, slide the crumb tray at the bottom of the appliance out.
CAUTION: It is very important to empty the crumb tray regularly. This avoids a build-up of crumbs and prevents a fire hazard.
3. Empty the tray, wipe with a soft damp cloth, dry thoroughly and replace it in the toaster.
NOTE: Do not use the toaster unless the crumb tray is fitted and in position.
4. Wipe the outer surface with a soft damp cloth. DO NOT use abrasive solutions or materials as this will damage the appearance.

After Sales Support

If the power cord is damaged, it MUST be replaced by a qualified electrician.

If you need help using your Toaster, please contact Giani Ltd:-

- Telephone: 0161 480 6204
- Email: info@gianiuk.co.uk
- Website: www.gianiuk.co.uk
(replacement instruction manuals are available to download).

Product Guarantee (UK Only)

If your appliance ceases to function within 1 year from the date of purchase, the retailer will replace it free of charge, provided:

- You have not misused, neglected or damaged it
- It has not been modified (except by Giani Ltd)
- It was not purchased second hand
- It has not been used commercially
- You have not fitted a plug incorrectly
- You can supply proof of purchase, indicating the price you paid and where and when the appliance was purchased.

This guarantee does not affect your statutory rights.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE APPLIANCE IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the appliance must NOT be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

CUCINA

Giani Limited - SK2 6RH