
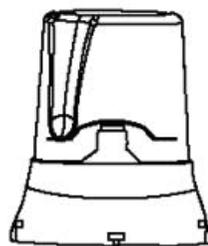


CUCINA
by *Giani*

IM-GCW-BL81818092015

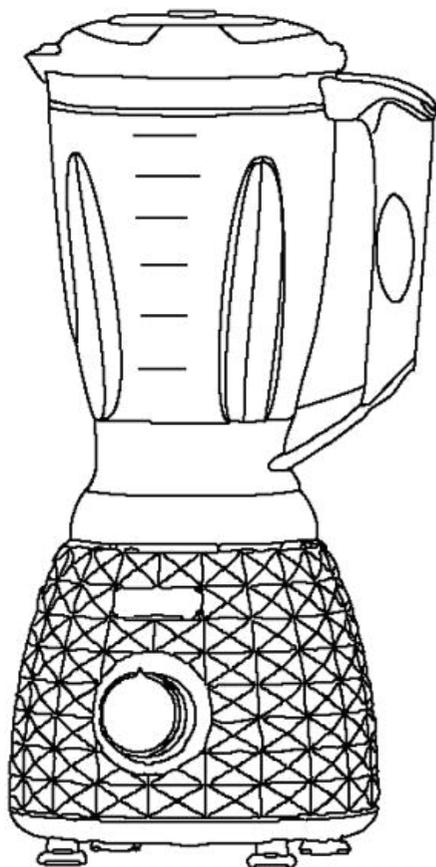

Diamond Blender with Grinder

Instruction Manual

Model Reference: GCW-BL818

Introduction

Thank you for choosing the Cucina by Giani Diamond Blender with Grinder. All products brought to you by Giani are manufactured to the highest standards of performance and safety.

Before use, please read this manual. It gives important instructions about safety, use and maintenance of your appliance.

Remove all packaging material. You may wish to keep the packaging for future use or storage for your appliance. Alternatively, dispose of accordingly.

Index

| | |
|------------------------------------|----|
| Important Safety Instructions..... | 02 |
| Product Overview..... | 03 |
| Control Dial..... | 04 |
| Technical Information..... | 04 |
| Before First Use..... | 04 |
| Using Your Blender..... | 05 |
| Blending Tips..... | 06 |
| Using Your Grinder..... | 06 |
| Trouble Shooting..... | 07 |
| Cleaning..... | 07 |
| After Sales Support..... | 08 |
| Product Guarantee..... | 08 |

Important Safety Instructions

Please read ALL instructions before using this appliance and keep safe for future reference.

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. This appliance is for domestic use only. It should not be used for commercial purposes.
2. Only use this appliance for its intended domestic use. Giani Ltd will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.
3. Do not use outdoors or on wet surfaces.
4. Do not handle the plug or appliance with wet hands.
5. Do not immerse the main body in water. Avoid any liquids entering the appliance as this will cause an electric shock or will short circuit the appliance.
6. These appliances can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
7. Children should not play with the appliance.
8. Cleaning and user maintenance should not be performed by children without supervision.
9. These products are not toys.
10. Do not use the appliance if any parts appear to be faulty, missing or damaged.
11. Do not use the appliance if it has been dropped or damaged in any way.
12. Do not leave the appliance unattended when connected to the mains supply.
13. Always unplug from the mains supply after use, before carrying out any cleaning or performing user maintenance.
14. Do not use the Blender or Grinder when empty.
15. Check to ensure that your electricity supply matches that shown on the rating plate.
16. Only use the attachments/accessories supplied with the product or recommended by Giani.
17. If the supply cord is damaged, it must be replaced by a qualified service agent in order to avoid a hazard.
18. The Jug blender and Grinder are not suitable for cleaning in a dishwasher.
19. Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
20. Keep the power supply cord away from any moving parts of the appliance during use.
21. Always use the appliance on a dry, stable, heat resistant surface.
22. Do not blend or grind more than the maximum capacity
23. Do not place the appliances against a wall or directly next to another appliance. Leave at least 20cm of free space around the appliance when in use.
24. To avoid injury or possible fires, do not cover the appliance when in operation.
25. Do not move the appliance when it is in use.
26. Do not disconnect the appliance from the mains power supply by pulling the cord, switch it off and remove the plug by hand.

- 27. Do not store in direct sunlight or high humidity conditions.
- 28. Use of an extension cord with the appliance is not recommended.
- 29. These appliance should not be operated by means of an external timer or separate remote control system.
- 30. Keep the appliance away from flammable materials.


CAUTION: The maximum run time for these products is 50 seconds. Do not exceed this time without allowing the appliance to rest. The rest time between each use must be a minimum of 2 minutes.

CAUTION: The blades of the jug and grinder are extremely sharp. Care must be taken when emptying and cleaning to avoid injury.

NEVER reach into the blender with your fingers, always use a plastic spatula.

Product Overview

- 1. Measuring Cup
- 2. Lid
- 3. Plastic Jug (blending capacity 1500ml)
- 4. Level indicator
- 5. Main Motor Unit
- 6. Control Dial
- 7. Non-Slip Feet
- 8. Dry Grinder

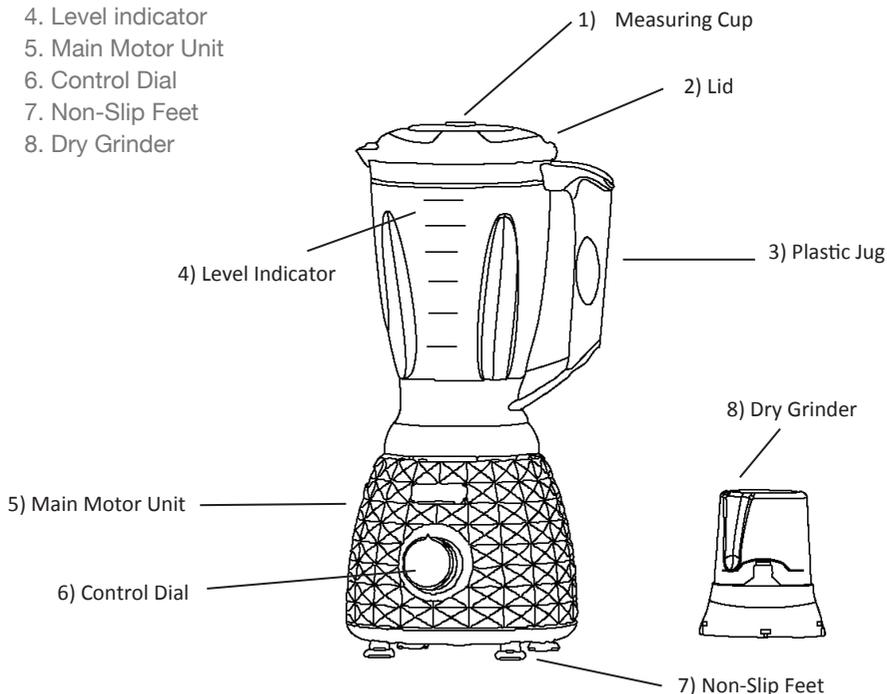

Control Dial

P - Pulse. Operates the blender at maximum speed for the time the dial is turned to the P setting. The pulse setting is recommended for ingredients that need very short blending or for breaking apart large pieces of food before continued blending (setting 1 or 2) is used.

0 - Off

1 - Low Speed. Recommended for liquids and for the preparation of non-solid ingredients such as Milkshakes, Batter mixes, Salad dressings, Omelettes, etc.

2 - High Speed. Recommended for Meat and solid foods such as Cheese, Beans, Nuts, etc.

Note: There is a safety lock on the main unit. If the jug or grinder is not locked into position correctly, the appliance will not work. Make sure the jug and grinder are aligned and locked in correctly before you begin.

Technical Information

| | |
|-------------------|---------------------|
| Voltage | 220 – 240V |
| Rated Power | 350W |
| Rotation Speed | 11000r/m – 22000r/m |
| Blending Capacity | 1500ml |

Before First Use




1. Remove all packaging materials, stickers and labels.
2. Clean the blender jug, lid and grinder with warm soapy water and a soft cloth or non-abrasive sponge, then rinse. Do not use any abrasive cleaning materials as this will damage the appliance.

CAUTION: take extreme care when cleaning, the blades are extremely sharp.

3. Dry thoroughly.
4. Wipe the main unit with a soft damp cloth and dry thoroughly.

Using Your Blender

1. Make sure the main unit is turned to the 'Off' position (0).
2. Place the Blender Jug onto the main unit and lock into position as indicated. (Fig 1)
3. Place your ingredients into the Blender Jug, ensuring you do not exceed the maximum level indicator (1500ml). (Fig 2)
4. Place the lid and turn clockwise to lock into position.
5. Plug the appliance into the mains socket and select the required speed setting. (Fig 3)
6. If you need to redistribute the ingredients in the Blender Jug, turn the control dial to the 'Off' position (0) and switch off at the mains socket. Unlock the lid and using a plastic spatula, push the ingredients down the jug or to stir, as required. Never use metal utensils as this will damage the jug / blades. Replace the lid and lock into position, switch on at the mains and continue blending.
7. Whilst blending you can add liquid ingredients (eg: oil for the preparation of mayonnaise) through the measuring cup opening in the lid. Simply twist the measuring cup to remove it from the lid and gently pour your ingredients into the jug. Replace the measuring cup and twist to lock back into position. This operation can be used whilst the motor is running. (Fig 4)

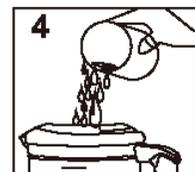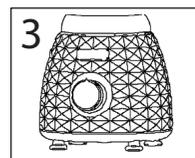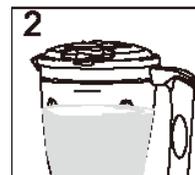

Note: Always add liquid ingredients first, followed by solid or dry ingredients. This will ensure a more consistent blend.

Note: DO NOT blend hot liquids; always allow to cool to room temperature before blending.

Note: DO NOT blend frozen ingredients that have formed a solid mass. Allow to thaw slightly and break up into smaller pieces before blending.

Note: DO NOT use the blender to mash potatoes or mix heavy dough.

Note: DO NOT blend ice cubes alone, this will damage the blades.

Blending Tips





Do not use the blender for very hard food products, such as bones, shelled nuts, frozen meats, etc, as this can damage the blade and cause the unit to malfunction.

Always make sure the blender jug and blades are completely dry before processing dry ingredients such as making breadcrumbs or chopping fresh herbs.

Using Your Grinder

The grinder attachment can be used for grinding ingredients such as, coffee beans, cheese, nuts, chocolate, dry bread, sugar cubes, herbs, etc.

1. Place the rubber sealing ring into the base. (Fig 5)
2. Place your ingredients into the container. **Do not add liquid, the grinder can only grind dry ingredients.** (Fig 6)
3. Do not fill the ingredients beyond 2/3 of the total capacity.
4. Place the grinding base onto the container and lock into position. (Fig 7)
5. Place the grinding unit onto the main unit and lock into position. (Fig 8)
6. Plug the appliance into the mains socket and select the required speed setting.

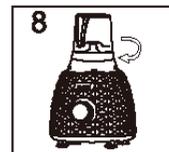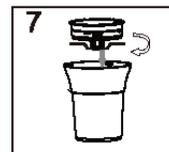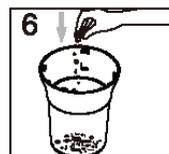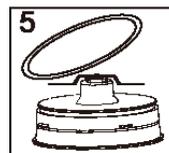

Trouble Shooting

| Problem | Possible Cause | Solution |
|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The unit cannot be switched on. | The Blender Jug is not locked into the main unit correctly. | Switch off the Blender and unplug from the mains socket. Check the jug is securely locked into position on the main unit and retry. |
| The blades do not appear to be turning. | The blade may be jammed. The mixture is too thick to process. | Switch off the Blender and unplug from the mains socket. Carefully remove ingredients blocking the blade. You may need to blend in smaller batches. |
| My mixture is not blending evenly. | The ingredients you are processing may be too big. You may be trying to process a large quantity of ingredients at the same time. | Ensure ingredients are cut into small enough pieces before blending. For best results, process in smaller batches. |
| Food is sticking to the side of the Blender. | The mixture may be too thick. | Switch off the Blender and unplug from the mains socket. Using a plastic spatula carefully scrape the food from the wall of the jug. More liquid may be required OR you may need to PULSE in short bursts. |

Cleaning

1. Turn the Blender to the 'off' position (0) and unplug from the mains socket and allow to cool.
2. Wash the Blender Jug and Grinder in warm soapy water with a soft damp cloth. Do not use abrasive materials or cleaning products as this will damage them. **THESE ITEMS ARE NOT DISHWASHER SAFE. TAKE EXTRA CARE WHEN CLEANING THE BLADES AS THEY ARE VERY SHARP.**
3. Do not immerse the main unit in water. Wipe down with a soft damp cloth.

For stubborn marks or mixtures that are thicker and more difficult to clean;

1. Pour warm water into the Blender Jug, lock the lid into position and turn the control dial to the 'pulse' setting. You will see the mixture will come away from the jug sides.
2. Turn the blender to the 'off' position (0) and unplug from the mains socket.
3. Continue the cleaning process from step 2 above.
4. Allow the appliance to dry out thoroughly before storage.

After Sales Support

If the power cord is damaged, it **MUST** be replaced by a qualified electrician.

If you need help using your Blender, please contact Giani Ltd:-

- Telephone: 0161 480 6204
- Email: info@gianiuk.co.uk
- Website: www.gianiuk.co.uk
(replacement instruction manuals are available to download).

Product Guarantee (UK Only)

If your appliance ceases to function within 1 year from the date of purchase, the retailer will replace it free of charge, provided:

- You have not misused, neglected or damaged it
- It has not been modified (except by Giani Ltd)
- It was not purchased second hand
- It has not been used commercially
- You have not fitted a plug incorrectly
- You can supply proof of purchase, indicating the price you paid and where and when the appliance was purchased.

This guarantee does not affect your statutory rights.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE APPLIANCE IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the appliance must **NOT** be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

CUCINA
by *Giani*

Giani UK Ltd - SK2 6RH