


**CUCINA**  
by *Giani*

IM-GCKMO28HI-BA19082016

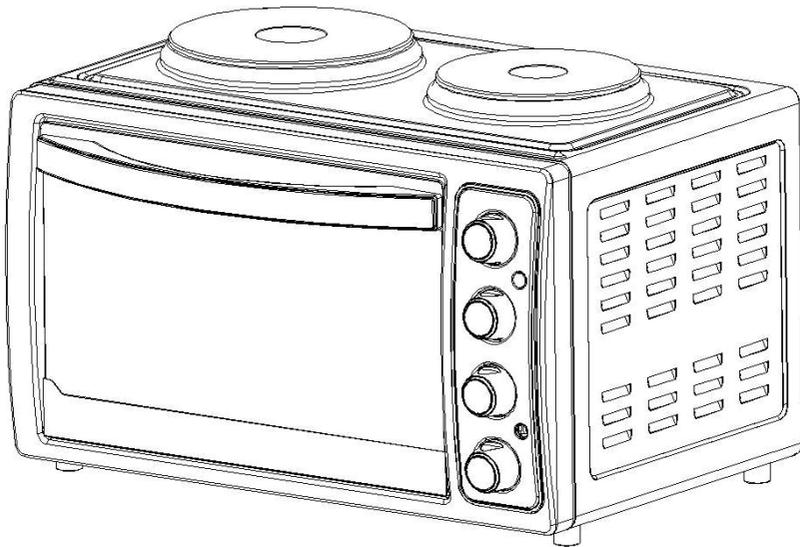

## 28L Electric Oven with Hot Plates

### Instruction Manual

Model Reference: GCKMO28HI-BA

## Introduction

Thank you for choosing the Cucina by Giani 28L Electric Oven with Hot Plates. All products brought to you by Giani are manufactured to the highest standards of performance and safety.

Before use, please read this manual. It gives important instructions about safety, use and maintenance of your appliance.

Remove all packaging material. You may wish to keep the packaging for future use or storage for your appliance. Alternatively, dispose of accordingly.

## Index

Important Safety Instructions.....	02
Product Overview.....	05
Control Panel.....	06
Technical Information.....	07
Before First Use.....	07
How To Use Your Oven.....	07
Using the Oven.....	08
Using the Hotplates.....	08
Cleaning.....	09
After Sales Support.....	10
Product Guarantee.....	10

## Important Safety Information

Read all of the instructions before using this appliance and keep safe for future reference.

When using electrical appliances, basic precautions should always be followed, including the following:

1. This appliance is for domestic use only. Do not use outdoors or on wet surfaces.
2. Do not handle the plug or appliance with wet hands.
3. Do not immerse the main body in water.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
5. Children must not play with the appliance.
6. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
7. Keep the appliance and its cord out of reach of children less than 8 years.
8. This product is not a toy.
9. Do not use the appliance if any parts appear to be faulty, missing or damaged.
10. Do not leave the appliance unattended when connected to the mains supply.
11. Always unplug from the mains supply before carrying out any cleaning, performing user maintenance.
12. Do not use the appliance if it has been dropped or damaged in any way.
13. Check to ensure that the electricity supply matches that shown on the rating plate.
14. Only use the attachments/accessories supplied with the product or recommended by Giani.
15. If the supply cord is damaged, it must be replaced by a qualified service agent in order to avoid a hazard.

16. The pan and basket are not suitable for cleaning in a dishwasher.
17. Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
18. Keep the power supply cord away from any parts of the appliance that may become hot during use.
19. Always use the appliance on a stable, heat resistant surface.
20. Do not place the appliance against a wall or directly next to another appliance. Leave at least 20cm of free space around the appliance when in use.
21. Do not cover the air inlet or the air outlet whilst the appliance is operating.
22. During use, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam outlet openings.
23. Take extra care when removing the pan after cooking is complete. Hot air and steam will be released. Keep your face and hands at a safe distance.
24. The surface of the appliance may get hot during operation.
25. Do not move the appliance when it is in use.
26. The glass door cannot support goods when fully opened. Do not rest trays/dishes on the glass door as this will damage the appliance.
27. Do not disconnect the appliance from the mains power supply by pulling the cord, switch it off and remove the plug by hand.
28. Do not store in direct sunlight or high humidity conditions.
29. Always unplug the appliance after use and before any cleaning or user maintenance.
30. Always ensure the appliance has cooled fully after use before performing any cleaning or user maintenance or storing away.


31. Do not clean the oven with metal scouring pads. Metal chippings would touch electrical parts and may cause electric shock. Use a sponge/scourer if required for stubborn marks.
32. This appliance has a tempered safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Avoid scratching the door surface. If the door becomes damaged, the appliance **MUST** be taken to a qualified electrician for repair. Do not use the appliance with a damaged glass door.
33. Use of an extension cord with the appliance is not recommended.
34. This appliance should not be operated by means of an external timer or separate remote control system.
35. Keep the appliance away from flammable materials.




**CAUTION:** HOT SURFACE!

## Product Overview

- 1 - Large Hotplate (18cm diameter)
- 2 - Small Hotplate (14.5cm diameter)
- 3 - Temperature Dial - Small Hotplate
- 4 - Temperature Dial - Large Hotplate
- 5 - Temperature Dial - Oven
- 6 - Oven Function Control Dial
- 7 - Heating Element
- 8 - Transparent Tempered Safety Glass Door
- 9 - Door Handle
- 10 - Wire Rack
- 11 - Food Tray
- 12 - Rotisserie Handle - for removing the Rotisserie Fork from the oven when hot
- 13 - Rotisserie Fork - suitable for a 3lb roast or chicken
- 14 - Tray Handle

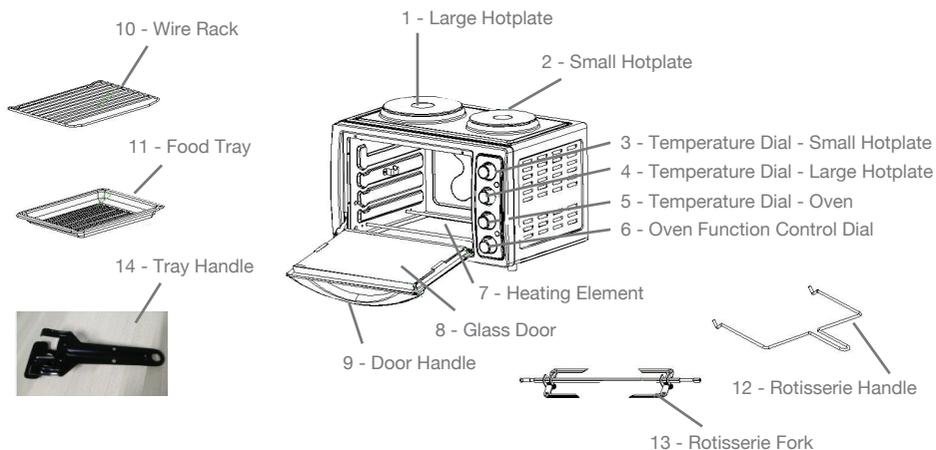

# Control Panel

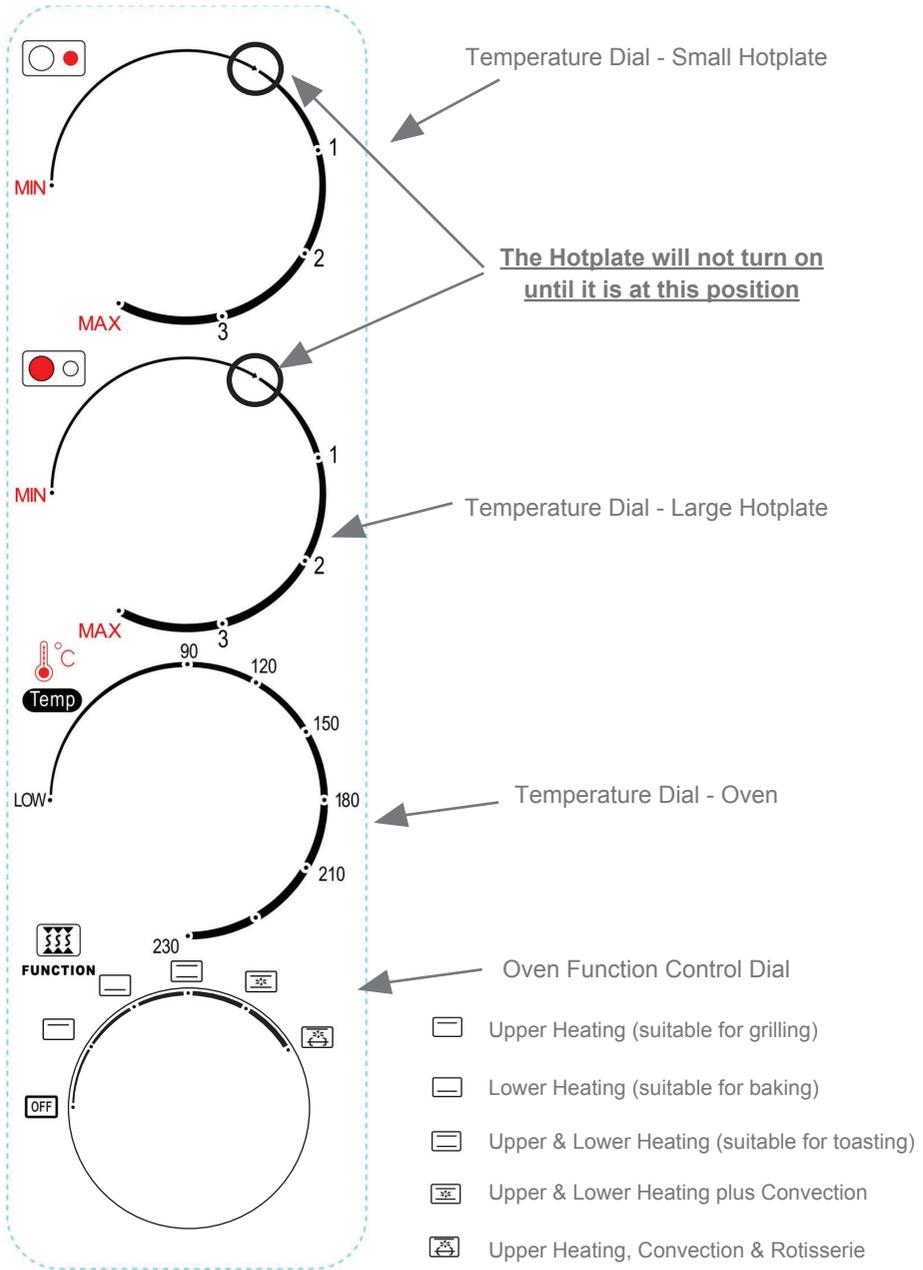

## Technical Information

Voltage	220 – 240V
Rated Power	2900W
Oven Power	1300W
Large Hotplate	1000W
Small Hotplate	600W
Oven Temperature Interval	0 – 230 °C
Capacity	28L

## Before First Use

1. Remove all packaging materials, stickers and labels.
2. Place your appliance on a stable, horizontal and even surface.
3. DO NOT PLACE ON A NON HEAT RESISTANT SURFACE.
4. MAKE SURE THERE IS AT LEAST 20CM OF FREE SPACE ALL AROUND THE APPLIANCE AT ALL TIMES.
5. Remove all trays/racks/accessories and wash with warm soapy water. Do not use any abrasive cleaning materials as this will damage them.
6. Dry thoroughly.
7. We recommend that you run the oven at its highest temperature (230°C) for approximately 15 minutes to eliminate any packaging oil that may remain after shipping.
8. Once the appliance has cooled, after approximately 30 minutes, wipe the inside and outside of the appliance with a soft damp cloth.

## How To Use Your Oven

**Note:** The Oven and the Hotplates can work at the same time or you can work each individually.

1. Check the Oven and Hotplates are in the off position.
2. Connect the mains plug to the wall socket and switch on.

## Using the Oven

1. Take out the food tray, wire rack and rotisserie fork.
2. Select the required cooking function
3. Turn the oven temperature dial to the required temperature, the oven indicator light will illuminate.
4. Place your food on the food tray, wire rack or rotisserie fork, depending on what you are cooking and using oven gloves open the oven door and place inside the oven.
5. When your food is cooked, using oven gloves open the door keeping your face at a safe distance as hot air will escape from the oven and take out the tray, wire rack or rotisserie fork.
6. Turn the function dial to the OFF position and turn the temperature dial to the LOW position.
7. Switch off the mains socket and unplug the appliance.

**Note:** The weight of food that can be put on the food tray/wire rack **MUST NOT** exceed 3kg. Ensure the food is evenly spread over the food tray/wire rack to achieve even cooking.

## Using the Hotplates

**Note:** For the optimum cooking effect, only use pans with a base diameter of 18cm (for the large Hotplate) or 14.5cm (for the small Hotplate) and with a flat base and lid.

**CAUTION: THE HOTPLATES ARE ONLY SUITABLE FOR PANS MADE FROM ENAMEL, CAST IRON OR STAINLESS STEEL. ALUMINIUM OR COPPER PANS CANNOT BE USED AS THEY WILL MELT DUE TO THE HIGH TEMPERATURE.**

1. Check the Oven and Hotplates are in the off position.
2. Connect the mains plug to the wall socket and switch on.
3. Select the Hotplate you wish to use  for the large Hotplate or  the small Hotplate, alternatively you can select both if required.
4. Turn the temperature dial for the required hotplate past the 'ON' marker (as shown on the control panel detail) and to the required setting. The hotplate light indicator will illuminate.
5. When cooking is complete, turn the temperature dial to 'MIN'.
6. Switch off the mains socket and unplug the appliance.

## Cleaning

**Note:** Your oven has a quick clean coating.

1. Make sure the appliance is switched off at the mains socket and unplugged.
2. If the appliance has been used, allow approximately 30 minutes to cool before cleaning.
3. Wipe the internal walls of the appliance with a soft damp cloth/sponge.
4. **Do not use steel wool scouring pads, abrasive detergents or scrape the interior walls with metal utensils as this will damage the quick clean interior.**
5. Wash all the accessories in hot soapy water only, do not put in a dishwasher and dry thoroughly.
6. Wipe the glass door with a soft damp cloth/sponge and dry with a paper towel.

## After Sales Support

If the power cord is damaged, it **MUST** be replaced by a qualified electrician.

If you need help using your Electric Oven, please contact Giani Ltd:-

- Telephone: 0161 480 6204
- Email: [info@gianiuk.co.uk](mailto:info@gianiuk.co.uk)
- Website: [www.gianiuk.co.uk](http://www.gianiuk.co.uk)  
(replacement instruction manuals are available to download).

## Product Guarantee (UK Only)

If your appliance ceases to function within 1 year from the date of purchase, the retailer will replace it free of charge, provided:

- You have not misused, neglected or damaged it
- It has not been modified (except by Giani Ltd)
- It was not purchased second hand
- It has not been used commercially
- You have not fitted a plug incorrectly
- You can supply proof of purchase, indicating the price you paid and where and when the appliance was purchased.

This guarantee does not affect your statutory rights.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE APPLIANCE IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the appliance must **NOT** be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

**CUCINA**  
by *Giani*

Giani UK Ltd - SK2 6RH

**Are you having problems with your device?  
Has something been damaged?  
Do you require spare parts?**

Before returning this item to your place of purchase  
Please contact Giani at:

Email - **info@gianiuk.co.uk**

Website - **www.gianiuk.co.uk**



# CUCINA

Giani Limited - SK2 6RH  
**info@gianiuk.co.uk**