



HF-636P 06/06/2018



MIDI Hi-Fi

Instruction Manual
Model Ref: HF-636P

Introduction

Thank you for choosing this MIDI Hi-Fi System. This product is manufactured to the highest standards of performance and safety.

Before use, please read this manual carefully. It gives important instructions about safety, use and maintenance of your device.


Remove all packaging material. You may wish to keep the packaging for future use or storage of your device. Alternatively, dispose of accordingly.

Important Safety Information




WARNING - To reduce the risk of fire, electric shock, or injury:

1. This appliance is for domestic use only. Do not use outdoors or on wet surfaces.
2. Do not handle the plug or appliance with wet hands.
3. Do not immerse the main body in water.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
5. Children must not play with the appliance.
6. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
7. Keep the appliance and its cord out of reach of children less than 8 years old.
8. This product is not a toy.
9. Do not use the appliance if any parts appear to be faulty, missing or damaged.
10. Always switch off at the mains supply before carrying out any cleaning, performing user maintenance or changing accessories.
11. Do not use the appliance if it has been dropped or damaged in any way.
12. Check to ensure that the electricity supply matches that shown on the rating plate.
13. Only use the attachments/accessories supplied with the product or recommended by Audial.
14. If the supply cord is damaged, it must be replaced by a qualified service agent in order to avoid a hazard

15. Only use this appliance for its intended domestic use. Audial will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.
16. Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
17. Keep the power supply cord away from any parts of the appliance that may become hot during use.
18. Do not disconnect the appliance from the mains power supply by pulling the cord, switch it off and remove the plug by hand.
19. Do not move the appliance when it is in use.
20. Use of an extension cord with the appliance is not recommended.
21. This appliance should not be operated by means of an external timer or separate remote control system.
22. Keep the appliance away from flammable materials.

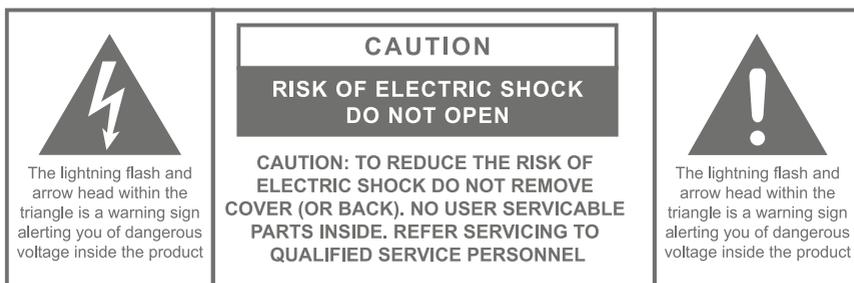

PRODUCT OVERVIEW

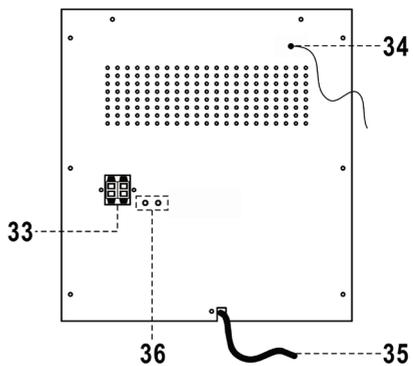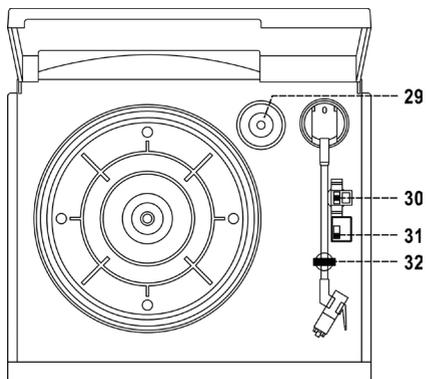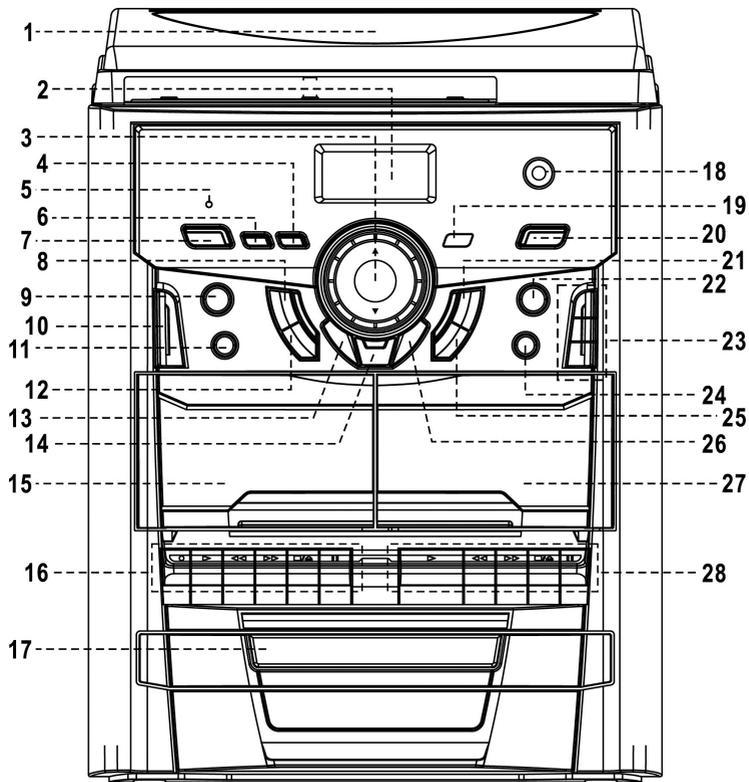

HI-FI CONTROLS

1. Dust Cover
2. LCD Display
3. Volume Up-Down Button
4. Extra Bass Control Button
5. Standby LED Indicator
6. FM Mode / Dubbing Speed Indicator
7. On/Standby Button
8. CD Stop Button
9. Light Button
10. CD Button
11. Sleep / Timer Button
12. Skip / Search / Tune Down button
13. Random / Memory Down Button
14. Memory / Clock Adjust Button
15. Deck 1 Compartment
16. Deck 1 Control Key
17. CD Tray
18. Headphone Jack
19. Remote Sensor
20. Preset EQ Button
21. CD Play / Pause Button
22. Disc Skip Button
23. Phono / Tuner / Tape Button
24. CD Tray Open/Close Button
25. Skip / Search / Tune Up Button
26. Repeat / Memory Up Button
27. Deck 2 Compartment
28. Deck 2 Control Keys
29. Spindle Adaptor
30. Turntable Speed Selector
31. Auto Stop Switch
32. Pick-u Holder
33. Speaker Wire Terminal
34. FM Wire Antenna
35. AC Power Cord
36. Light Wire Jack

CAUTION: Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.


IMPORTANT: Since movement of the CD mechanism and the sensitive circuitry may cause interference to the radio tuner nearby, switch this unit off while operating other radio devices.

BEFORE USE

- Unpack all parts and remove protective material.
- Do not connect the unit to the mains before checking the mains voltage and before all other connections have been made.
- Do not cover any vents and make sure that there is a space of several centimeters around the unit for ventilation

CONNECTION

1. Connect the speaker wire from included speaker box to the speaker terminal (33) of the main unit and connect lighting wire with the 3.5mm plug of the speaker box to the light wire jack (36) of main unit as well.
2. Connect the power cord (35) to AC outlet, the unit will go into standby mode and Standby LED (5) lights up.
3. Turn on the unit by On/Standby button (7). If the LCD display (2) is on with backlighting, it means the power supply is normal. Now your system is ready to play the music.

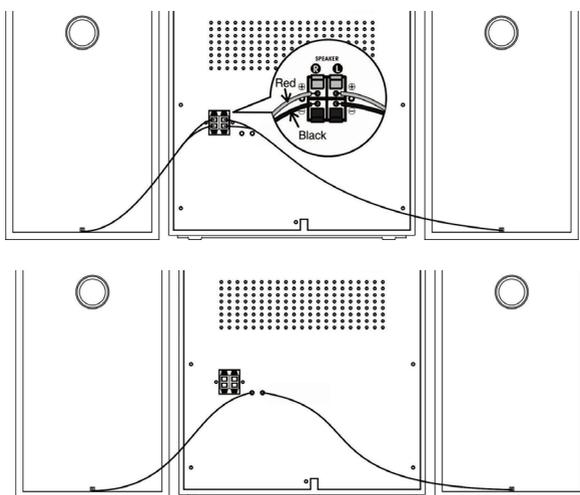

SETTING THE CLOCK

1. Set unit in standby mode by On/Standby button (7).
2. Press the “Mem/clk-adj” button (14), the first second digit of “00” is flashing. press ◀◀ or ▶▶ button (12/25) to set the correct hour. Press ”Mem/clk-adj” button (14) to store the correct hour.
3. The third & fourth digit of “00” is flashing, press the ◀◀ or ▶▶ button (12/25) to set the correct minutes. Press “Mem/clk-adj” (14) to store the correct minute.
4. To select 12/24 hours display mode, hold the CD stop button (8) to change mode repeatedly.

Note: the pre-set time will be re-set completely if switching off the main power button on system. you are recommended to switch the system into standby mode for convenience usage.

SETTING THE CLOCK

Manual tuning

1. Set unit in standby mode by On/Standby button (7).
2. Press Tuner button (23) to select tuner mode.
3. Tune to the required station by pressing the Tuning up/down button (12/25).
4. Adjust volume controls to the desired volume level.

Auto tuning

1. Press Tuner button (23) and select tuner mode.
2. Press and hold the Tuning up/down button (12/25) for 1-2 seconds and then release
3. The unit will start seeking automatically and stop until a radio station is reached.
4. Repeat step 2 & 3 until the desired radio station is being reached.
5. Adjust volume controls to the desired volume level.

NOTE: when using battery, take off the AC cable from Boombox.

CAUTION:

Remove batteries if they are flat or not being used for a long period of time. Batteries contains chemical substances, so they should be disposed of properly.

Preset stations

You can store up to total of 20 radio stations in the memory.

1. Set to radio mode
2. Turn to the desired radio station by “ Manual” or “Auto” tuning method.
3. Press “Mem/clk-adj” button (14) to enable program state.
4. Press “Repeat/M-up” button (26) to select the desired station memory for storage.
5. Press “Mem/clk-adj” button (14) again to confirm the setting.
6. Repeat step 2 to 5 to store other stations.
7. Press “M-up” or “M-dn” button (26/13) to select the preset stations in order.
8. To return normal tuner mode, leave keys free.

Note: The pre-set memories will be cancelled completely if disconnect the main power of the system. You are recommended to switch the system into standby mode for convenience usage.

There are 10 seconds for program state, after 10 sec. this state would release to normal tuner mode automatically.

You can overwrite a present station by storing another frequency in its place.

Radio Data System (RDS) (On remote control)

This are the features that display the information released from the radio broadcast which will be shown on the LCD display.

Radio Search mode: Press to active the RDS function and the program service station name (PS) is being displayed.

Radio Search Function: Press to select the program type you want to listen, then press the Tuning up/down button (12/25) to start RDS searching and the unit can automatically detect a suitable station, which is currently broadcasting with program type identification (PTY) signal.

Remark: no “ PS “ nor “ PTY “ appears if no signal is sent.

Programs are classified as follows:

NEWS, AFFAIRS (Current Affairs), INFO (Information), SPORT, EDUCATE (Education), DRAMA, CULTURE, SCIENCE, VARIED, POP M (Pop music), ROCK M (Rock Music), MOR M (Middle of the Road Music), LIGHT M (Light Classical), CLASSICS (Serious Classical), OTHER M (Other Music).

Notes

Program service station name (PS)

This is a name consisting of less than 8 alphanumeric characters, which is displayed in order to inform listeners about the program service being broadcast by the radio station. Example: bbc 1

Program type identification (PTY)

PTY allows selection by one of 15 program types rather than by a station.

Radio text (text)

Information such as the cast list of a play or the title of a song is shown on the display.



Clock-Timer (CT)

CT function provides an accurate clock signal.

If the clock of the system is not adjusted after plug in, when a RDS clock is received, the system will automatically update the system clock to the received RDS clock time. The system clock is now adjusted.

FM & FM-stereo reception

- Set the FM mode selector at “MONO” position. Programs are received in mono mode. In particular when stereo signals are weak. It is preferable to receive the program in mono.
- Set the FM mode selector at “ST” position for receiving stereo programs. The “ST” indicator will appear on LCD to show FM stereo program is receiving.
- FM : The receiver has a build-in FM wire antenna hanging at the rear cabinet. This wire should be totally unravalled and extended fro best reception.

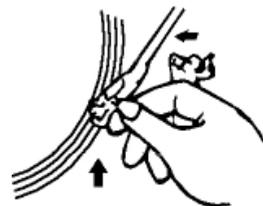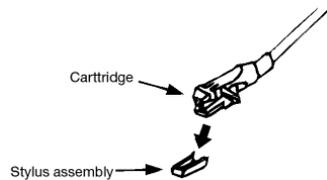

Phono

Note:

- *Remove the stylus protector.*

- *Be sure that the tone arm is being detached from the tone arm rest before operating, and re-secured again afterwards.*
1. Press Phono button (23)
 2. Set the speed selector (30) to the proper position depending on the record to be played.
 3. Place the record on the platter (use the spindle adaptor (29) if required).
 4. Lift the tone arm from the rest and slowly move it to the record side. The platter will begin to rotate.
 5. Place the tone arm to the desired position of the record.
 6. Adjust the volume to the desired level.
 7. At the end of record, the platter will automatically stop rotating. Lift the tone arm from the record and return it to the rest.
 8. To stop manually, lift the tone arm from the record and return it to the rest.

Remark: as some kind of record the auto-stop area was out of the unit setting, so it will stop before the last track finish. In this case, select the Auto-stop switch (31) to “ off “ position, then it will run to the end of the record but will not stop automatically (turn off the unit by power button or switch back the auto-stop switch (31) to “ on “ position to stop the platter rotate). Then put back the tone arm to the rest position.

Playing Compact Disk

Getting started

1. Press CD button (10).
2. Press CD tray open/close button (24) to open the CD tray.
3. Place a CD with the printed side facing up inside the tray.
4. Press the Disc skip button (22) to turning the CD tray and loading out the other disc compartment.

5. Press the CD tray open/close button (24) to close the CD door.
6. CD search is performing, the display will show the total number of disc, number of tracks & playing time of disc.

Note: CD searching will be performed every time when switching to CD mode or closing the CD door. All CD functions will be response only after the CD searching is completed (around 5 seconds).

Play / Pause Mode ▶||

 
1. Press the “Play/Pause” button (21) to start playback, the first track of the first disc will be played and the play indicator will appear on the LCD display (2).3
2. Or press Disc skip button (22), to select the desire tray disc.
3. To interrupt, press the “Play/Pause” button (21) once, and the display will start flashing. Press again to release & resume playback.

Stop Mode ■

1. If Stop button (8) is pressed during play or pause mode, system will go to stop mode.

Skip Mode (Skip Up ▶▶ / Skip Down ◀◀)

1. During play or pause mode, if Skip up button (25) is pressed it will go to next track and display the track no. and then remain the play or pause mode.
2. During play or pause mode, if Skip Down button (12) is pressed. It will go back to the beginning of the track, original track no. is display and remain the play or pause mode.



Note: Single track repeat function is possible in normal or programmed playback, repeat one disc or all discs is only available in normal playback.

3. After step 2, press skip down button (12) again will go to the previous track and remain the play or pause mode.

Search Mode (Search Up ►► / Search Down ◀◀)

1. During play mode, if search up button (25) is pressed & hold for few seconds, it will start searching forward.
2. During play mode, if search down button (12) is pressed & hold for few seconds. It will start searching backwards.

Random Play

You can listen all the tracks of all available discs in a random order by this function

1. Press Random button (13) once, unit will play all disc randomly ; press again, unit will play 1 disc randomly.
2. Press “play/pause” button to start random playback.
3. All tracks of all discs or all tracks of 1 disc will be started playback in random order.
4. Press “random” button again to cancel random mode.

CD Programming

Up to 60 tracks can be programmed to be programmed to be played in any required order from one CD or all CDs in the CD changer.

1. Set in CD mode.
2. Press the Mem/clock-adj. button (14)
3. Press the Disc skip button (22) to select the desired disc.
4. Press skip or button (12/25) to select the desired track.
5. Press the Mem/clock/adj. button (14) again to store the track in memory.
6. Repeat steps 3 to 5 to enter additional program
7. Press Play/Pause button (21) to start playback in order.
8. Press Stop button (8) to stop playback and press again to clear all programmed tracks.

LISTENING TO TAPE

General operation

Stop / Eject key	Press to stop all deck operation. Press again to open the cassette door.
Fast forward key & Fast rewind key	Press to start rapid tape winding in either forward or reverse direction. Press stop / fast rewind key eject keys when the cassette spools stop turning.
Play key	Press to start playing tape.
Pause key	Press to stop tape operation temporarily. Press again to resume play.
Record key (deck 1 only)	Press together with play key to start tape recording.

Playback

- Press Tape button (23) to active tape function
- Put in the cassette tape.
- Press play key to active playback
- Adjust the volume control to the desired level.
- Use pause key when you want to stop playback temporarily.
- Press stop / eject key when finished.

RECORDING

A. Recording from tape (deck 2 to deck 1)

This unit enables you to duplicate a pre-recorded tape to another tape. It is performed only one way from deck 2 (playback) to deck 1 (recording).

Dubbing at normal speed

- Press the Tape function button (23).
- Inset a pre-recorded cassette into deck 2 and a blank cassette tape into deck 1.
- Press the Pause key and then press the Record and Play key at deck 1.
- Press the Play key to start playback at deck 2 & then press Pause key at deck 1 to start dubbing.
- Press Pause key at deck 1 & Stop key at deck 2 when finish.

Dubbing at high speed

This unit is quipped with a high speed dubbing system which can save the time for dubbing by 2/3 when compare to normal speed.

- Press the Dubbing speed button (6) to “ HI “ position and then follow the same procedures as stipulated in “Dubbing at normal speed”.
- When dubbing a pre-recorded cassette tape at high speed, a chattering sound is being heard. To avoid this, set the volume control to a minimum level.
- Do no active/de-active the HI-NOR. dubbing button (6) during dubbing, this will vary the speed of recording and may be damage the cassette tape.

B. Recording from radio

- Press Tuner button (23) to active radio mode
- Tune to the desired station and insert a blank cassette tape in deck 1.
- Press Record & Play key to start recording.
- Press Pause keys and then “Stop/Eject” key when finish.

C. Recording from CD

- Press the CD button (10).
- Insert a blank cassette tape in deck 1 which suitable for recording.
- Press Pause key first and then Record & Play key at cassette. Recording function is now on standby.
- Activate the CD player, and then press Pause key at cassette to start recording.
- To stop recording, press Stop button (8) on CD player first, then press the Pause key and then Stop/Eject key on cassette tape deck.

D. Recording from turntable

- Press Phono button (23) to active turntable mode
- Insert a blank cassette tape in deck 1.
- Press Record & Play key to start recording.
- Select the desire record and start playback
- Press Pause keys and then Stop/Eject key when finish.

MORE FEATURES

A. Sleep setting

1. Press & hold the Sleep/Timer button (11), to active & adjust the sleep timer in the order of 90 > 80 >70....10 minutes automatically.
2. System will stop and go to standby mode automatically after the selected timing.
3. To cancel the sleep mode, press and hold Sleep/Timer button until "SLEEP" indicator disappear.

B. Timer setting (On remote only)

This function allows the system to turn on automatically and wake you up by soft CD music, Phono, Tape or radio. Set the unit at standby mode

Press the Mode button on remote handset, the LCD display will show the information as following order:-

1. Current time
 2. On time setting: Press Mem/clock adj. key & then skip up/down to set the hour, then press Mem/clock adj to confirm hour then skip up/down to set the minute. then press Mem/clock adj to confirm the alarm off time.
 3. Off time setting: Press Mode button again to enter Timer off setting mode. Press Mem/clock adj. key & then skip up/down to set the hour, then press Mem/clock adj to confirm hour then skip up/down to set the minute. then press Mem/clock adj to confirm the timer off time.
 4. Mode: Press Mode button again to enter wake up mode. Press Mem/clock adj. key & then skip up/down to select wake up mode then press Mem/clock adj to confirm the wake up mode.
- Press the Mode button repeatedly to review the presets time in order.
 - The programming will automatically cancel if no button is being pressed in a period of about 10 seconds.

Active/de-active timer function

1. Press the Sleep/Timer button (11) once & the timer indicator is shown on LCD (1).
2. To cancel alarm function by press again Sleep/Timer button until the timer indicator “ ” disappear.

C. Presets EQ function

This unit provides 5 differences sound mode to enhance your listening experience. you can select the desired effect by pressing the EQ button (20) repeatedly at following sequence:-



D. Lighting effect

This unit provides 5 different lighting effects. You can press the “ Light ” button (9) and this will automatically change colours.

E. Mute function

Press to terminate the sound output from system temporarily and press again to cancel this mode.

Note: Due to ErP stage two requirement and protect the environment. The unit will switch to standby mode automatically once no any music playing over 15 minutes.


REMOTE CONTROL TRANSMITTER CONTROL FUNCTIONS

Battery installation

The infra-red transmitter require 2 x AAA batteries for operation (not included)

Button description

Open/ Close	Press to open & close the CD door
On/ Standby	Press to switch the system into standby mode
Disc 1,2,3	Press to select the disc for playback directly
Disc-ch	Press to stop tape operation temporarily. Press again to resume play.
Sleep/ Timer	Press together with play key to start tape recording.
Light	Press to activate the lighting effect
Phono	Press to active phone mode
EQ	Press to select EQ mode
Mute	Press to mute the audio
CD	Press to activate CD Mode
Tape	Press to activate Tape mode

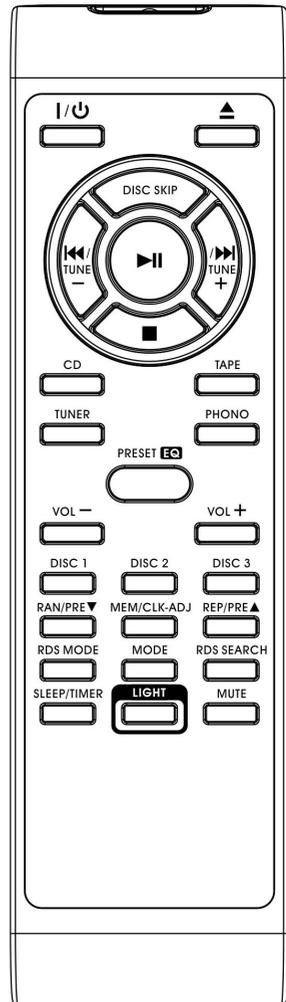

Tuner	Press to activate radio Tuner mode
Volume +/-	Volume control up and down
Play/Pause ▶ 	In CD mode, press once to start playback. Press again to stop the dic playback temporarily.
Stop ■	In CD mode: press to terminate CD playback In Tuner Mode: Press to select the radio band
Repeat/ M-Up	In CD mode: press to activate the repeat function In Tuner mode: Press to call out the preset memory in order
Random/ M-Down	In CD mode: Press to activate the random playback for CD mode In Tuner mode: Press to call out the preset memory in back
RDS Mode	In Tuner mode: Press to select RDS mode & information on LCD
Memory/ clk-adj	In standby mode: For clock setting In Tuner Mode: For pre-setting of radio stations into memory
Mode	To review and set the alarm on/off time
RDS Search	In Tuner Mode: Press to select the RDS program type for searching.

DISPOSAL INFORMATION

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, this product must NOT be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of this product separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of this product separately, the product is marked with a crossed-out wheeled dustbin.



AUDIAL

Wellington Grove,
Stockport, SK2 6RH

